


[BACK TO SECRET CB INDEX](#)

SECRET CB VOLUME 1

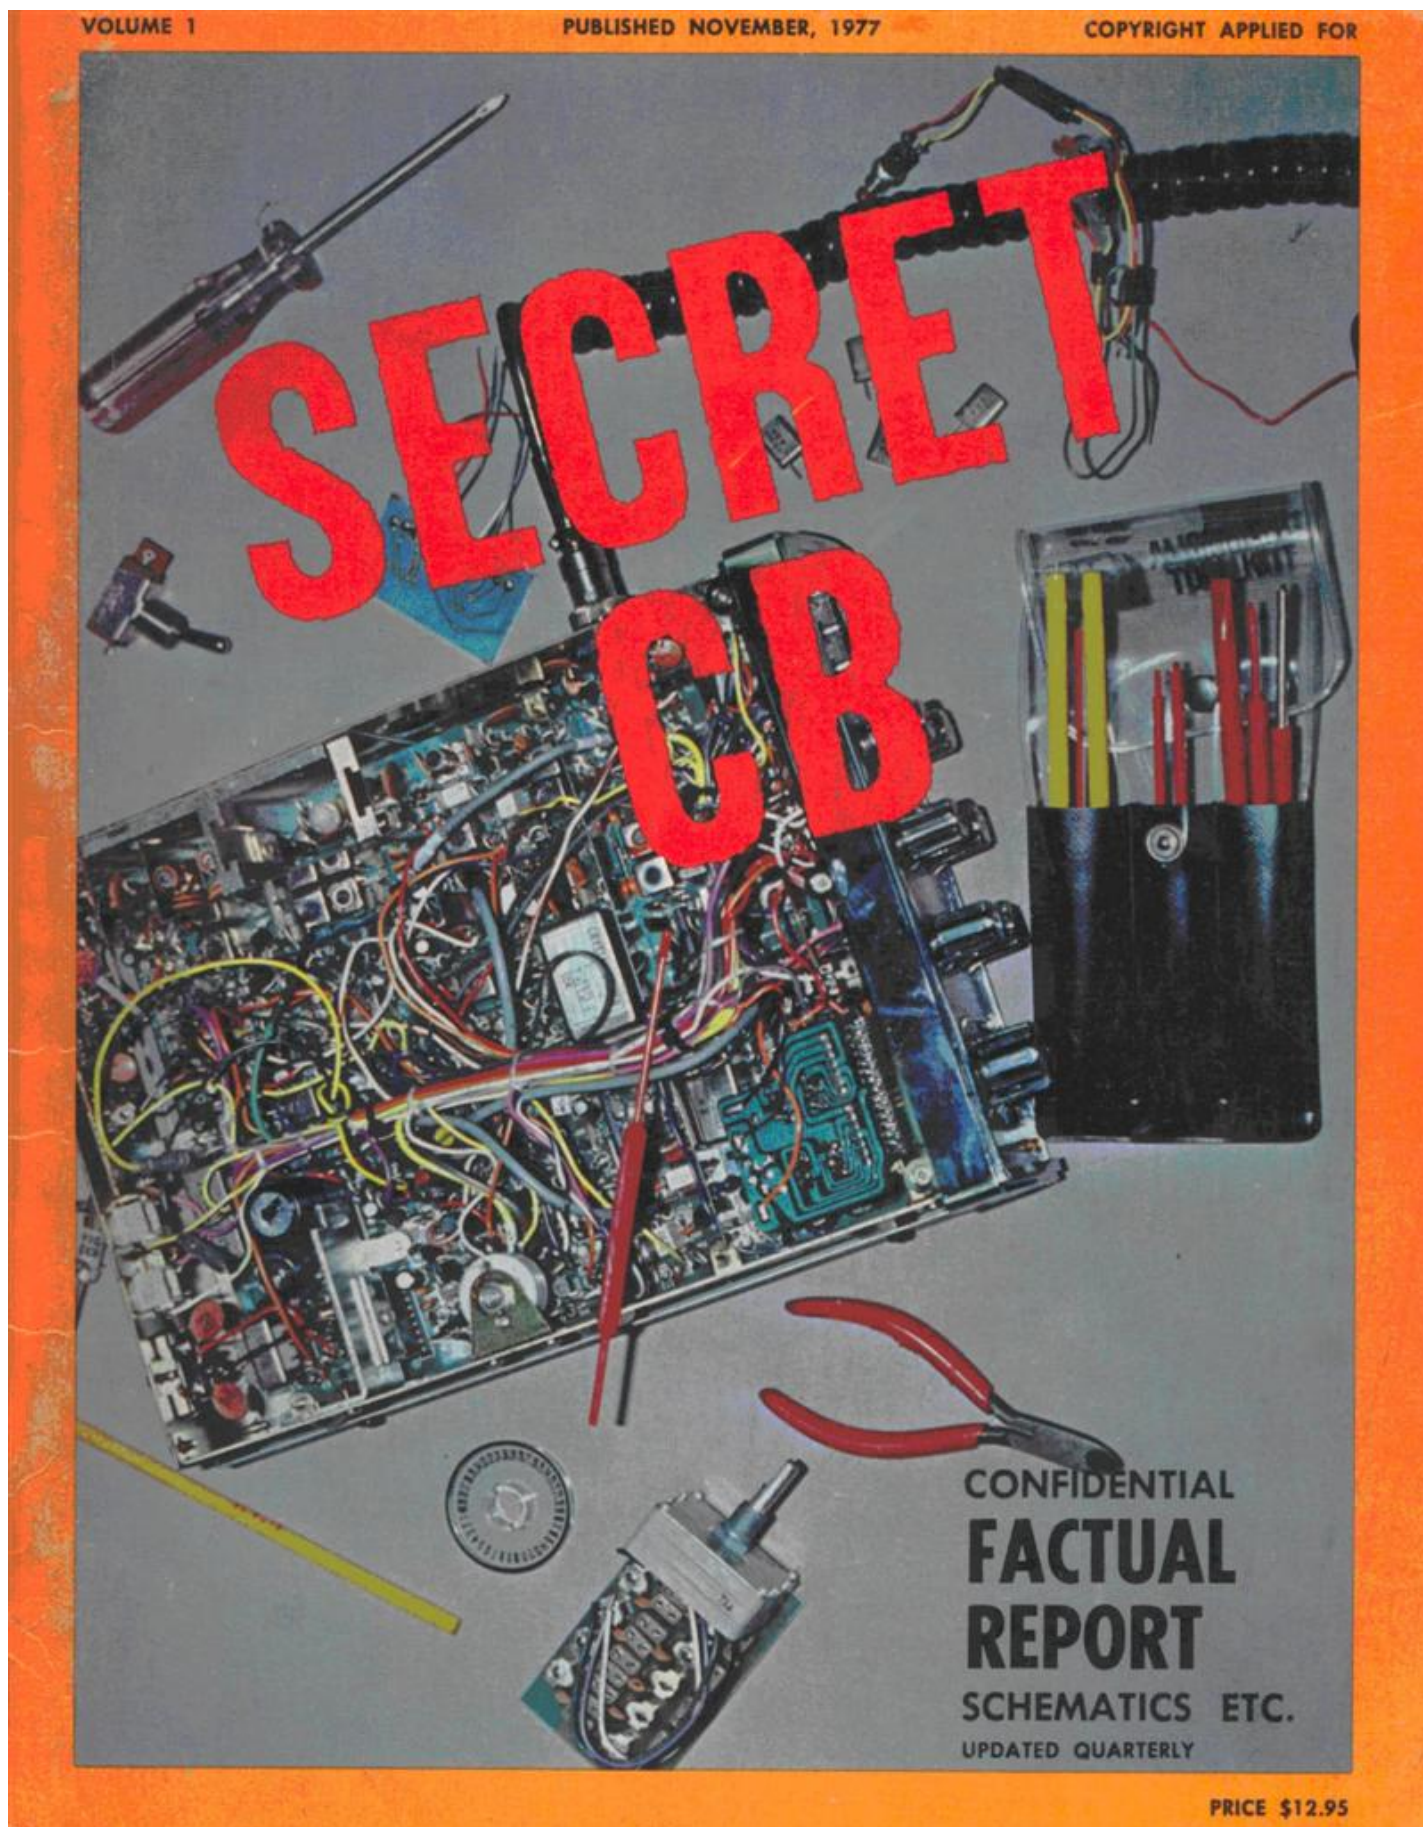

SECRET C.B.

This book is dedicated to all of the
avid CB'ers, both young and old, in
the United States, today, and to those
of the future generations.

R.L.

TABLE OF CONTENTS

INTRODUCTION.....	3
CRYSTAL CROSS REFERENCE GUIDE.....	5
LETTER CHART FOR CRYSTAL CORRELATION.....	11
SPECIFIC RADIO MODIFICATIONS.....	19
GENERAL INFORMATION.....	63

Secret C.B.

Volume One

Published Nov., 1977

New issues quarterly

Mail Order only

Address any and all inquiries
with return address to:

Selman Enterprises
P. O. Box 8189
Corpus Christi, Texas 78412

IMPORTANT: READ THIS FIRST

INTRODUCTION

The information in this book is not to be used to exceed F.C.C. specifications, in any case, as applied to power, modulation, frequency spectrum, etc. It is illegal to do this to any CLASS D RADIO.

This book is a factual report of gathered information, and as such is intended for use on radios FOR EXPORT ONLY.

If you are not familiar with electronics, it is better to check for advise with your local electronics or CB center, as to restrictions, etc., concerning your radio.

More information, on other units will be forthcoming in future issues, to be published on a quarterly basis.

This book will not be found at a book store, but can be obtained through your local CB store or distributor, or by sending \$12.95 to:

SECRET C.B.
P. O. BOX 8189
CORPUS CHRISTI, TEXAS 78412

WARNING: MODIFICATIONS IN THIS
BOOK ARE FOR EXPORT USE ONLY.
ILLEGAL ON CLASS D RADIO

Before attempting any repairs or modifications, be sure that you are familiar with the involved tuning techniques and the various involved circuits within the radio. Improper tuning or tuning the wrong circuits can result in serious damage to your radio. If there is any doubt, consult with a qualified technician before proceeding.

A FEW THINGS TO REMEMBER:

Always use the plastic type of tuning tools. Use an "AHHH" sound, when tuning, and avoid any whistling as this will give a false reading. Tuning for maximum power will sometimes result in backwards modulation, so always keep an eye on the percent of modulation while you are tuning. When attaching external crystal boxes or other similar units, remember that if lead inductance occurs, it may cause an improper frequency to be generated. Keeping leads as short as possible and close to the transmitter section, along with the use of proper test equipment will result in more accurate results. It must also be noted that some types of radios will fail to lock on frequency, when taken to the higher level frequency spectrum. These will require complete re-alignment by a technician. Another point to remember is that the Standing Wave Ratio (SWR) will become more critical and higher as the operating frequency is raised.

MOBILE ANTENNA SECRETS:

Running a whip is definitely recommended for longer range. FRANCES INDUSTRIES makes a whip (98") which has a DB gain. Co-phase is not recommended with this antenna, and 22 ft. of RG-58 coax is required. Van Ordt makes an AUDIO KING antenna, which is an OIL FILLED CENTER LOAD. This antenna has shown a DB gain of 4.5 and better signal-to-noise ratio than other antennas.

CRYSTAL CROSS REFERENCE GUIDE

BROWNING

Eaglette.....O
 LTD.....H
 SST.....I
 Brownie.....F

CLARICON

Intruder.....P
 Pirate.....P
 Privateer.....P
 30850.....P

COBRA

19.....J
 21.....J
 20.....I
 * 23.....Special
 24.....I
 25.....I
 28.....I
 28A.....I
 29.....J
 85.....F
 Cam 89.....J
 130.....F
 131.....F
 132(old).....F
 132A.....H
 135(old).....F
 135A.....H
 138.....B
 139.....B
 880.....I
 * 27.....Special
 Cam 88.....Q
 98.....Q

COURIER

Cadet.....J
 Caravelle.....J
 Centurion.....C
 Chief.....P
 Citation.....P
 Classic II.....P
 Comet.....P
 Conqueror.....J
 Classic III.....J
 Crusier.....P

(COURIER CON'T)

Gladiator.....C
 Ranger 23.....P
 Rebel.....J
 Redball.....P
 Spartan.....G
 Royale.....P
 TR-23.....P
 Traveller.....P
 23T.....P
 23S.....P

CRAIG

4201.....P

DEMCO

Demco Satellite.....P

ECHO

99.....J

FANON

Fan Fare 100.....J
 Fan Fare 880.....J
 SFT 400.....P
 500.....P
 800.....P
 900.....P

GEMTRONICS

GTX 23.....P
 GTX 36.....P
 GTX 2300.....J
 GTX 2325.....F

HY-GAIN

670.....J
 671.....J
 672.....J
 673.....J
 674.....A
 674A.....K
 674B.....K

JOHNSON

122.....L
 123.....L
 123A.....L
 123B.....L
 123SJ.....L
 124.....M
 124M.....M
 130.....L
 132.....L
 223.....L
 250.....L
 320.....M
 323.....M
 323A.....M
 351.....D
 352.....D

KRACO

KCB 2310.....J
 KCB 2330.....L
 2320.....J
 2345.....J

KRIS

Valiant.....J
 23.....K
 HC-25.....P
 23+.....J
 Victor.....O
 Victor II.....O
 Vega.....J
 Echo 99'er.....J
 XL-23.....P
 XL-70 SSB.....F
 Ventura.....P

LAFAYETTE

CCB-50.....A
 Comstat 25A.....J
 Comstat 25B.....J
 Mark V.....I
 Mark VI.....I
 Comstat 35.....J
 Comphone 23.....P
 HB-525.....J
 HB-700.....P
 SSB-100.....K
 Telstat 925.....P
 Telstat 100.....K

(LAFAYETTE CON'T)

LCB-50.....A
 Micro 723.....P
 SSB-25.....K
 SSB-50.....A
 Telstat 23.....J
 Telstat 25.....A
 Telstat 1023.....P
 Telstat 75.....K
 Micro 923.....N
 525.....J
 625.....J
 Telstat 25A.....A
 Telstat 50.....T
 HB 23/23A.....T
 Telstat 150.....T
 Dyna-com 23.....T

MARK

SSB-46.....G
 Lancer 23.....I

MIDLAND

13-765.....J
 13-790.....P
 13-795.....N
 13-796.....P
 13-853.....J
 13-861.....J
 13-857.....J
 13-862.....P
 13-862B.....P
 13-863.....P
 13-864.....P
 13-865.....P
 13-866.....J
 13-867.....P
 13-868.....J
 13-869.....P
 13-870.....P
 13-871.....I
 13-863B.....J
 13-872.....P
 13-873.....F
 13-875.....J
 13-876.....J
 13-877.....P
 13-878.....F
 13-879B.....P
 13-880.....F
 13-880B.....F
 13-881B.....I
 13-882.....J
 13-883.....J

(MIDLAND CON'T)

13-885.....F
 13-887.....P
 13-890.....J
 13-892.....K
 13-893.....B
 13-894.....A
 13-895.....B
 13-896.....A
 13-897.....P
 13-898.....A
 13-898A.....K
 13-898B.....A
 13-899.....P
 13-976.....K

PACE

123.....P
 123A.....P
 130.....P
 133.....P
 143.....P
 144.....P
 145.....I
 223.....N or O
 1000B.....E
 1000M.....E
 1023B.....D
 2376.....O
 2300.....O
 2300DX.....O
 CB-76.....O
 Sidetalk 101.....D
 SSB 1023.....D
 Sidetalk 23.....F

PAL

Roadrunner.....I
 Coyote.....I

PEARCE SIMPSON

Alleycat.....I
 Bearcat.....P
 Bengal.....G
 Bobcat.....P
 Bobcat 23D.....I
 Cheeta.....C
 Cougar (old).....J
 Cougar (new).....P
 Cougar 23B.....P
 Lynx.....P
 Panther.....G
 Puma.....P

(PEARCE SIMPSON CON'T)

Puma 23B.....P
 Pusycat.....P
 Simba.....C
 Tiger 23C.....P
 Tiger.....J
 Tomcat.....J
 Tomcat (late).....I
 Guardian.....N
 2301.....P
 Super Lynx.....P

PENNYS

Pinto 23B.....P
 Golden Pinto.....P
 981-3445.....A
 981-6051.....P
 981-6075.....P
 981-6210A.....P
 981-6213.....J
 981-6220.....P
 981-6240.....A
 981-6060.....P

RAY JEFFERSON

CB-405.....P
 CB-705.....P

RAYTHEON

Ramcom III.....I

REALISTIC

American.23.....P
 Mini 23.....P
 Navaho Pro.....P
 Pro 9er.....P
 TRC 40.....P
 TRC 23A.....P
 TRC 23B.....P
 TRC 23C.....P
 TRC 24.....P
 TRC 24B.....P
 TRC24C.....J
 TRC 25.....P
 TRC 30.....J
 TRC 46.....A
 TRC 47.....K
 TRC 48.....K
 TRC 49.....P
 TRC 52.....J
 TRC 55.....N
 TRC 50.....P

REGENCY

Formula 23.....J
 Sprint 23.....P
 CR-123.....G
 CR-123B.....G
 CR-185.....P
 Cr-142.....P
 CR-186.....P
 CR-230.....P
 Cr-202.....J
 Imperial.....Q
 Imperial II.....Q
 Range Gain.....Q
 Range Gain II.....Q

ROBYN

747B.....F
 BB-123.....P
 GT-7.....P
 J-123.....P
 LB-23.....P
 SX-101.....P
 SX-102.....P
 T-123B.....J
 XL-1.....P
 XL-2.....P
 GTX-440.....Special
 TR-123C.....P
 DG-30.....P
 WV-23.....P
 SX-007.....P
 K-123.....P

ROYCE

1-600.....P
 1-601.....P
 1-602.....P
 1-603.....P
 1-605.....P
 1-606.....P
 1-620.....P
 SSB 1-630.....Special
 SSB 1-631.....U
 SSB 1-635.....A
 SSB 1-640.....U
 SSB 1-650.....K

SBE

Catalina I&II.....P
 Console.....F
 Coronado.....I
 Coronado II.....I
 Brute.....P
 Catalina.....I
 Cortez.....I
 SBE 6.....F
 SBE 12.....D
 SBE 16 Console II.....D
 SBE CB 8.....F
 SBE CB 14.....F
 Sidebander II.....D
 Sidebander III.....D
 Sierra.....J
 Trinidad.....P
 7 CB.....J
 9 CB.....P
 10 CB.....I
 11 CB.....P
 21 CB.....I
 22 CB.....P

SEARS

Sears Sideband.....A

SHARPE

CBT 58.....J
 CBT 500.....J
 CB 550.....J
 CB 500 UB.....P

SILTRONIX

SSB-23.....F
 Albatross.....F
 Condor.....P
 Penguin.....P

SONAR

FS-23.....R
 FS-3023.....R

SURVEYOR

2400.....P

TEABERRY

5x5.....P
 Big T.....P
 T Charlie One.....J
 Mighty T.....J
 Golden 5x5.....J
 T Scout.....J
 Tele T.....J
 Modle T.....J
 Twin T.....S
 T Control.....J

TRAM

D-201.....AI
 Diamond 40.....I
 Diamond 60.....H
 XL-5.....D
 XL.....F
 Titan IIA,III,IV...W-1

UNIMETRICS

Porpoise I.....P

XTAL

XCB-4.....P
 XCB-5.....P
 XCB-6.....P
 XCB-7.....P
 XCB-10.....F
 XCB-11.....F
 XCB-12.....P

SEPARATE TRANSMIT & RECIEVE CRYSTALSBROWNING

Eagle Mark III.....V
 Eagle Mark III SSB.W
 Eagle Mark III SSB.W-1

SPECIAL OSCILLATOR CRYSTALSBROWNING

Eagle Mark III.....X

TRAM

Diamond 60.....Y&AA&AI

BROWNING

LTD.....Z&AA&AI
 Crobra 132A,135....Z&AA&AI

HAM CRYSTALSDRAKE

TRAC.....AB
 Twins.....AC

YAESU

E,EE,EX.....AD

TEMPO

One.....AE

HEATHKIT

104.....AF

KENWOOD

TS 520, 820, Twins....AG

COLLINS

KWM 2,2A,3.....AH

LETTER CHART FOR CRYSTAL FREQUENCY CORRELATION

<u>CRYSTAL FREQUENCY</u>		<u>OPERATING</u>		<u>CRYSTAL FREQUENCY</u>		<u>OPERATING</u>
	A				C	
7.9767		27.605 *		11.600		27.605 *
7.9600		27.555 *		11.550		27.555 *
7.9434		27.505 *		11.500		27.505 *
7.9267		27.455 *		11.450		27.455 *
7.9100		27.405		11.400		27.405
7.8933		27.355		11.350		27.355
7.8766		27.305		11.300		27.305
7.8600		27.255		11.250		27.255
7.8434		27.205		11.200		27.205
7.8267		27.155		11.150		27.155
7.8100		27.105		11.100		27.105
7.7933		27.055		11.050		27.055
7.7767		27.005		11.000		27.005
7.7600		26.955 *		10.950		26.955 *
7.7433		26.905 *		10.900		26.905 *
7.7267		26.855 *		10.850		26.855 *
7.7100		26.805 *		10.800		26.805 *
7.7083		26.800 *		10.795		26.800 *
14.937 & 14.934		RC		8.1965 & 8.1935		RC
	B				D	
8.759		27.605 *		12.300		27.605 *
8.709		27.555 *		12.250		27.555 *
8.659		27.505 *		12.200		27.505
8.609		27.455 *		12.150		27.455 *
8.559		27.405		12.100		27.405
8.509		27.355		12.050		27.355
8.459		27.305		12.000		27.305
8.409		27.255		11.950		27.255
8.359		27.205		11.900		27.205
8.309		27.155		11.850		27.155
8.259		27.105		11.800		27.105
8.209		27.055		11.750		27.055
8.159		27.005		11.700		27.005
8.109		26.955 *		11.650		26.955 *
8.059		26.905 *		11.600		26.905 *
8.009		26.855 *		11.550		26.855 *
7.959		26.805 *		11.500		26.805 *
7.954		26.800 *		11.495		26.800 *
11.0335		RC		7.4925 & 7.4965		RC

The frequencies marked with an asterisk are for reference purposes only, as these would cause your radio to operate above and below the authorized C.B. frequency band, which is prohibited by F.C.C. Rules and Regulations.

<u>CRYSTAL</u> <u>FREQUENCY</u>		<u>OPERATING</u>		<u>CRYSTAL</u>		<u>OPERATING</u>
	E				G	
12.340		27.605 *		12.405		27.605 *
12.290		27.555 *		12.355		27.555 *
12.240		27.505 *		12.305		27.505 *
12.190		27.455 *		12.255		27.455 *
12.140		27.405		12.205		27.405
12.090		27.355		12.155		27.355
12.040		27.305		12.105		27.305
11.990		27.255		12.055		27.255
11.940		27.205		12.005		27.205
11.890		27.155		11.995		27.155
11.840		27.105		11.905		27.105
11.790		27.055		11.855		27.055
11.740		27.005		11.805		27.005
11.690		26.955 *		11.755		26.955 *
11.640		26.905 *		11.705		26.905 *
11.590		26.855 *		11.655		26.855 *
11.540		26.805 *		11.605		26.805 *
11.535		25.800 *		11.600		26.800 *
7.4525		RC *		7.3915 & 7.3885		RC *
	F				H	
12.305		27.605 *		16.565		27.605 *
12.255		27.555 *		16.515		27.555 *
12.205		27.505 *		16.465		27.505 *
12.155		27.455 *		16.415		27.455 *
12.105		27.405		16.365		27.405
12.055		27.355		16.315		27.355
12.005		27.305		16.265		27.305
11.955		27.255		16.215		27.255
11.905		27.205		16.165		27.205
11.855		27.155		16.115		27.155
11.805		27.105		16.065		27.105
11.755		27.055		16.015		27.055
11.705		27.005		15.965		27.005
11.655		26.955 *		15.915		26.955 *
11.605		26.905 *		15.865		26.905 *
11.555		26.855 *		15.815		26.855 *
11.505		26.805 *		15.765		26.805 *
11.500		26.800 *		15.760		26.800 *
7.4915 & 7.4885		RC *		6.030		RC *
7.490		RC *				

* - Refer to notation on First Page

<u>CRYSTAL FREQUENCY</u>	<u>OPERATING</u>	<u>CRYSTAL</u>	<u>OPERATING</u>
I		K	
17.465	27.505 *	23.930	27.605 *
17.415	27.455 *	23.880	27.555 *
17.365	27.405	23.830	27.505 *
17.315	27.355	23.780	27.455 *
17.265	27.305	23.730	27.405
17.215	27.255	23.680	27.355
17.165	27.205	23.630	27.305
17.065	27.155	23.580	27.255
17.015	27.055	23.530	27.205
16.965	27.005	23.480	27.155
16.915	26.955 *	23.430	27.105
16.865	26.905 *	23.380	27.055
16.815	26.855 *	23.330	27.005
16.765	26.805 *	23.280	26.955 *
16.760	26.800 *	23.230	26.905 *
9.575		23.180	26.855 *
10.030	RC *	23.130	26.805 *
		23.125	26.800 *
		14.940	RC *
		14.937	RC *
J		L	
23.790	27.505 *		27.505 *
23.740	27.455 *		27.455 *
23.690	27.405		27.405
23.640	27.355	33.200	27.355
23.590	27.305	33.150	27.305
23.560	ch 22A	33.100	27.255
23.540	27.255	33.050	27.205
23.490	27.205	33.000	27.155
23.440	27.155	32.950	27.105
23.390	27.105	32.900	27.055
23.340	27.055	32.850	27.005
23.290	27.005	32.800	26.955 *
23.240	26.955 *	32.750	26.905 *
23.190	26.905 *	32.700	26.855 *
23.140	26.855 *	32.650	26.805 *
23.090	26.805 *	32.600	26.800 *
23.085	26.800 *	32.550	RC *
14.980	RC *	32.500	RC *
		32.495	
		5.705	
		6.160	

* - see notation on First Page

<u>CRYSTAL FREQUENCY</u>	<u>OPERATING</u>	<u>CRYSTAL</u>	<u>OPERATING</u>
M		O	
33.345	27.505 *	35.471	27.505 *
33.295	27.455 *	35.421	27.455 *
33.245	27.405	35.371	27.405
33.195	27.355	35.321	27.355
33.145	27.305	35.271	27.305
33.095	27.255	35.221	27.255
33.045	27.205	35.171	27.205
32.995	27.155	35.121	27.155
32.945	27.105	35.071	27.105
32.895	27.055	35.021	27.055
32.845	27.005	34.971	27.005
32.795	26.955 *	34.921	26.955 *
32.745	26.905 *	34.871	26.905 *
32.695	26.855 *	34.821	26.855 *
32.645	26.805 *	34.771	26.805 *
32.640	26.800 *	34.766	26.800 *
10.150	RC *	7.976	RC *
		8.431	RC *
N		P	
33.500	27.505 *	38.100	27.505 *
33.450	27.455 *	38.050	27.455 *
33.400	27.405	38.000	27.405
33.350	27.355	37.950	27.355
33.300	27.305	37.900	27.305
33.250	27.255	37.870	ch 22A
33.200	27.205	37.850	27.255
33.150	27.155	37.800	27.205
33.100	27.105	37.750	27.155
33.050	27.055	37.700	27.105
33.000	27.005	37.650	27.055
32.950	26.955 *	37.600	27.005
32.900	26.905 *	37.550	26.955 *
32.850	26.855 *	37.500	26.905 *
32.800	26.805 *	37.450	26.855 *
32.795	26.800 *	37.400	26.805 *
6.460	RC *	37.395	26.800 *
6.005	RC *	10.150 & 10.605	RC *
		4.605	RC *
		11.060	RC *

* - see notation on First Page

<u>CRYSTAL FREQUENCY</u>	<u>OPERATING</u>	<u>CRYSTAL</u>	<u>OPERATING</u>
	Q		S
11.350	27.505 *	9.050	27.605 *
11.300	27.455 *	9.000	27.555 *
11.250	27.405	8.950	27.505 *
11.200	27.355	8.900	27.455 *
11.150	27.305	8.850	27.405
11.100	27.255	8.800	27.355
11.050	27.205	8.750	27.305
11.000	27.155	8.700	27.255
10.950	27.105	8.650	27.205
10.900	27.055	8.600	27.155
10.850	27.005	8.550	27.105
10.800	26.955 *	8.500	27.055
10.750	26.905 *	8.450	27.005
10.700	26.855 *	8.400	26.955 *
10.650	26.805 *	8.350	26.905 *
10.645	26.800 *	8.300	26.855 *
8.645	RC *	8.250	26.805 *
		8.245	26.800 *
		13.3435	RC *
		13.3465	RC *
	R		T
16.700	27.505 *	38.765	27.505 *
16.650	27.455 *	38.715	27.455 *
16.600	27.405	38.665	27.405
16.550	27.355	38.615	27.355
16.500	27.305	38.565	27.305
16.450	27.255	38.515	27.255
16.400	27.205	38.465	27.205
16.350	27.155	38.415	27.155
16.300	27.105	38.365	27.105
16.250	27.055	38.315	27.055
16.200	27.005	38.265	27.005
16.150	26.955 *	38.215	26.955 *
16.100	26.905 *	38.165	26.905 *
16.050	26.855 *	38.115	26.855 *
16.000	26.805 *	38.065	26.805 *
15.995	26.800 *	38.060	26.800 *
4.795	RC *	11.270	RC *
		11.725	RC *

* - see notation on First Page

<u>CRYSTAL FREQUENCY</u>	<u>OPERATING</u>	<u>CRYSTAL</u>	<u>OPERATING</u>
U		V con't	
7.9791	27.605 *	26.925	26.925 *
7.9625	27.555 *	26.915	26.915 *
7.9458	27.505 *	26.905	26.905 *
7.9291	27.455 *	26.895	26.895 *
7.9125	27.405	26.885	26.885 *
7.8958	27.355	26.875	26.875 *
7.8791	27.305	26.865	26.865 *
7.8625	27.255	26.855	26.855 *
7.8458	27.205	26.845	26.845 *
7.8291	27.155	26.840	26.840 *
7.8125	27.105	26.835	26.835 *
7.7958	27.055	26.830	26.830 *
7.7791	27.005	26.825	26.825 *
7.7625	26.955 *	26.820	26.820 *
7.7458	26.905 *	26.815	26.815 *
7.7291	26.855 *	26.810	26.810 *
7.7125	26.805 *	26.805	26.805 *
14.934 & 14.937	RC *	26.800	26.800 *
V		W	
27.505	27.505 *	16.810	27.505 *
27.495	27.495 *	16.800	27.495 *
27.485	27.485 *	16.790	27.485 *
27.475	27.475 *	16.780	27.475 *
27.465	27.465 *	16.770	27.465 *
27.455	27.455 *	16.760	27.455 *
27.445	27.445 *	16.750	27.445 *
27.435	27.435 *	16.740	27.435 *
27.425	27.425 *	16.730	27.425 *
27.415	27.415 *	16.720	27.415 *
27.405	27.405	16.710	27.405
27.395	27.395	16.700	27.395
27.385	27.385	16.690	27.385
27.375	27.375	16.680	27.375
27.365	27.365	16.670	27.365
27.355	27.355	16.660	27.355
27.345	27.345	16.650	27.345
27.335	27.335	16.640	27.335
27.325	27.325	16.630	27.325
27.315	27.315	16.620	27.315
27.305	27.305	16.610	27.305
27.295	27.295	16.600	27.295
27.285	27.285	16.590	27.285
27.275	27.275	16.580	27.275
27.265	27.265	16.570	27.265
27.255	27.255	16.560	27.255
27.245	27.245	16.550	27.245
27.235	27.235	16.540	27.235
26.955	26.955 *	16.530	27.225
26.945	26.945 *		
26.935	26.935 *		

* - see notation on First Page

CRYSTAL FREQUENCY	OPERATING	CRYSTAL	OPERATING
W-1 EAGLE ALSO		AA	
21.250	27.505 *	12.500	26.665*
21.240	27.495 *		to
21.230	27.485 *		26.955*
21.220	27.475 *		
21.210	27.465 *	AB	
21.200	27.455 *	42.0000	27.500 - 28.000*
21.190	27.445 *	41.5000	27.000 - 27.500*
21.180	27.435 *	41.0000	26.500 - 27.000*
21.170	27.425 *		
21.160	27.415 *	AC	
21.150	27.405	38.6000	27.500 - 28.000*
21.140	27.395	38.1000	27.000 - 27.500*
21.130	27.385	37.6000	26.500 - 27.000*
21.120	27.375		
21.110	27.365	AD	
21.100	27.355	16.02	WWV*
21.090	27.345	33.52	27.500 - 28.000*
21.080	27.335	33.02	27.000 - 27.500*
21.070	27.325	32.52	26.500 - 27.000*
21.060	27.315		
21.050	27.305	AF AF AF	
21.040	27.295	36.3950	27.500 - 28.000*
21.030	27.285	35.8950	27.000 - 27.500*
21.020	27.275	35.3950	26.500 - 27.000*
21.010	27.265		
20.990	27.245	AE AE AE	
20.980	27.235	42.0000	27.500 - 28.000*
		41.5000	27.000 - 27.500*
		41.0000	26.500 - 27.000*
X		AG	
31.720	27.295	36.3950	27.500 - 28.000*
	to	35.8950	27.000 - 27.500*
	27.505*	36.3950	26.500 - 27.000*
Y		AH	
13.100	27.265	15477.500	27.800 - 28.000*
	to	15377.500	27.600 - 27.800*
	27.555*	15277.500	27.400 - 27.600*
Z		15177.500	27.200 - 27.400*
13.100	27.265	15077.500	27.000 - 27.200*
	to	14977.500	26.800 - 27.000*
	27.555*		
* - see notation on First Page		AI	
		13.400	27.565* CH-56
			to
			27.855* CH-85 29

SPECIFIC RADIO MODIFICATIONS AND ADJUSTMENTS*

- * check and be aware of all F.C.C. regulations concerning adjustments and modifications to Class D radios before proceeding

SPECIFIC RADIO MODIFICATION

COBRA 138XLR/139XLR

- (1) It is possible to obtain 32 extra channels. Refer to modification sheet "A".
- (2) This radio will slide 5KHz, by modification to the "VOICE LOCK".
- (3) Power/modulation increase:
 - (a) VR-8, adjust for maximum power on AM, while checking forward modulation.
 - (b) CT-7, adjust for maximum sideband output.
 - (c) VR-7, (automatic modulation control, AM) adjust for maximum modulation.
 - (d) VR-2, controls RF gain level.
 - (e) VR-3, controls squelch level.
 - (f) VR-12, TX meter level control.
 - (g) VR-14, modulation meter level control.

COBRA 139

- (1) VR-12, automatic modulation control (AMC), tune for maximum modulation.
- (2) VR-15, adjust for maximum power on S.S.B.
- (3) Maximum output power on AM may be achieved by tuning the various inductive coils(ie: L-12).

COBRA 29XLR

- (1) L-15, L-16, L-17, tune for maximum AM power.
- (2) VR-5, tune for maximum modulation.
- (3) VR-4, controls RF meter adjustment.
- (4) VR-1, controls S- meter adjustment.
- (5) VR-6, controls modulation meter adjustment.

COBRA 21XLR

- (1) L-15, L-16, L-17, tune for maximum AM power.
- (2) RT-4, tune for maximum modulation.
- (3) RT-2, controls S-meter adjustment.
- (4) RT-5, controls RF meter adjustment.

NOTE: On some models of Cobra radios, such as the Cobra 139, a crystal box capable of 27.800 MHz plus can be attached, for further modifications. Refer to crystal reference charts and various box drawings.

BROWNING MARK IV (GOLDEN EAGLE)

- (1) The famous "Screaming Eagle" sound can be added by locating the large capacitor closest to the front panel. This is a 2 Mfd @ 450 volts. Replace this with a 20 Mfd @ 450 volts, to create the sound.

BOMAN 910, 920, 930

On the whole, Boman radios exhibit that distinct ability to have an increased wattage capability of 10 to 25 watts. Further modifications, on this brand of radio, are at this time being developed and should be forthcoming

- (1) VR-2, adjust for maximum modulation (may be over 130%)
- (2) Tune the green and yellow inductive coils for a maximum power output with forward modulation.

NOTE: This radio exhibits better adjacent channel rejection than more than 98% of other brand radios.

COMMANDO 2340

For 100% modulation, ground the top of the 47K ohm (yellow, violet, orange) resistor, located near the top of the audio modulation transformer; this is R-80.

COURIER REDBALL

For 100% modulation, clip the limiting diode (D-18) located on the P.C. board.

HYGAIN V-674B

VR-7, adjust modulation for 100%.

JOHNSON 123 A

To increase modulation, clip CR-11, (diode) out of circuit.

REALISTIC TRC-47

- (a) R-46, Automatic modulation control. Adjust to increase modulation.
- (b) R-55, Adjust to maximum transmitter power output.
- (c) R-102, SSB (ALC) automatic level control, adjust for maximum SSB power.

REALISTIC TRC-57

- (a) VR-12, AM (AMC) adjust to maximum modulation.
- (b) VR-13, adjust for maximum modulation.
- (c) Cut diode D31 (also increases modulation)
- (d) VR-25, SSB (ALC) adjust for maximum SSB power.
- (e) VR-21, AM power (adjust for maximum AM power).

TEABERRY STALKER II

- (a) VR-6, AM adjustment for maximum power.
- (b) VR-13 AM modulation adjust for maximum modulation.
- (c) VR-12, SSB adjust for maximum SSD power.

REALISTIC TRC-452

VR-207, AM AMC adjust for 100% modulation.

PRESIDENT

PRESIDENT WASHINGTON 40 channel SSB Base.

- (a) VR-7, (AMC) adjust for maximum modulation.
- (b) VR-8, AM transmit level, adjust for maximum transmit power.
- (c) VR-9, transmit frequency adjustment, DO NOT TUNE.
- (d) CT7, adjust for maximum SSB power.
- (e) Refer to modification sheet "A" for addition of 32 channels.

NOTE: These modifications also apply to the President GRANT.

STANDARD COMMUNICATIONS HORIZON 29

- (a) AMC, cut diode D-218 out of circuit for 100% modulation.

XTAL XSSB-10

- (a) Jump the cathode of D-2 to ground to increase modulation.

HYGAIN I-A

- (a) To obtain additional channels with this radio, locate the I.C. chip (PL-1) and jump pins 1&11 with a switch.
- (b) Channels 17-23 will remain normal, the others will be as follows:

CHANNEL	FREQUENCY	CHANNEL	FREQUENCY
1	27.165	9	27.265
2	27.175	10	27.275
3	27.185	11	27.285
4	27.205	12	27.305
5	27.215	13	27.315
6	27.225	14	27.325
7	27.235	15	27.335
8	27.255	16	27.355

MODIFICATION SHEET "A" (COBRA 138XLR/COBRA 139XLR)
(PRESIDENT WASHINGTON/GRANT)
(ROBYN GT-440D)

- (1) Shifting of transmitter frequency, by use of the CLARIFIER/VOICE LOCK control.

The following steps will allow the transmitter frequency to be shifted 1.5 KHz above and below the standard operating frequency:

- (a) Eliminate D-30 (1S2473).
- (b) Remove R-119 (100 ohm) from the PC board and place it between the cathode side of D-32 (WZ061) and the conjunction position of R-166 and R-169 on the bottom side of the PC board.
- (c) By making a short circuit across R-166, the channel frequency will be shifted 1.5 KHz above and 4.5 KHz below.

- (2) The adding of 32 extra channels.

- (a) Locate the extra switch (transfer circuit) and place it in the on position.
- (b) Take a 1N60 diode and place it between the extra switch and pin #21 on IC7 (UPK858C), so that the cathode side of the diode is facing toward the switch.
- (c) Cut the island of pin #19, of IC7, and place the register 4.7K ohm between the two islands which were separated.
- (d) Connect a lead wire between the empty position on the switch and the separated island from pin #19.
- (e) Realign the transmitter so that there is a minimum difference of RF output power between channels #1 and #40.
- (f) Make the same adjustment for receiver sensitivity.
- (g) Check the P.L.L. circuit also.
- (h) The following are the frequencies of the new channels:

<u>Channel</u>	<u>Freq-(MHz)</u>	<u>Channel</u>	<u>Freq-(MHz)</u>	<u>Ch.</u>	<u>(MHz)</u>
# 8	27.455	# 23	27.655	38	27.785
9	465	24	635	39	795
10	475	25	645	40	805
11	485	26	665		
12	505	27	675		
13	515	28	685		
14	525	29	695		
15	535	30	705		
16	555	31	715		
17	565	32	725		
18	575	33	735		
19	585	34	745		
20	605	35	755		
21	615	36	765		
22	625	37	775		



ROBYN WV-23
ADDING (A) CHANNELS TO ROBYN UNITS

- (1) Remove unit from its cabinet and locate the black wire from the channel selector to the ground foil on the front edge of the board.
- (2) Remove the two wires from the ANL switch and solder them together. Tape them up and bend them out of the way.
- (3) Solder a 2 in. piece of hookup wire from the bottom of the ANL switch to the ground on the board.
- (4) Solder a 2 in. piece of wire to a #4204 Miller coil and mount it as shown.
- (5) Solder the black wire from the channel selector to the center of the ANL switch.
- (6) Connect the wire from the coil to the top of the ANL switch as shown.
- (7) Connect the power and antenna to the unit. Put the channel selector on channel 1 with the ANL switch in the off position, and adjust the coil until channel 2 is received. If a frequency counter is available, adjust the transmit frequency to 26.975.

The unit will now transmit on all of the (A) channels 3A through 23A. When the ANL switch is in the off position the unit will be normal on all channels. With the switch on, the selector can be used on channels 3, 7, 11, 15, 19, 22, and 23, adding seven new channels to the unit.

The unit described here is the WV-23, but this can be done to almost any of the Robyn units with a switch and a little ingenuity.

ROBYN WV-23

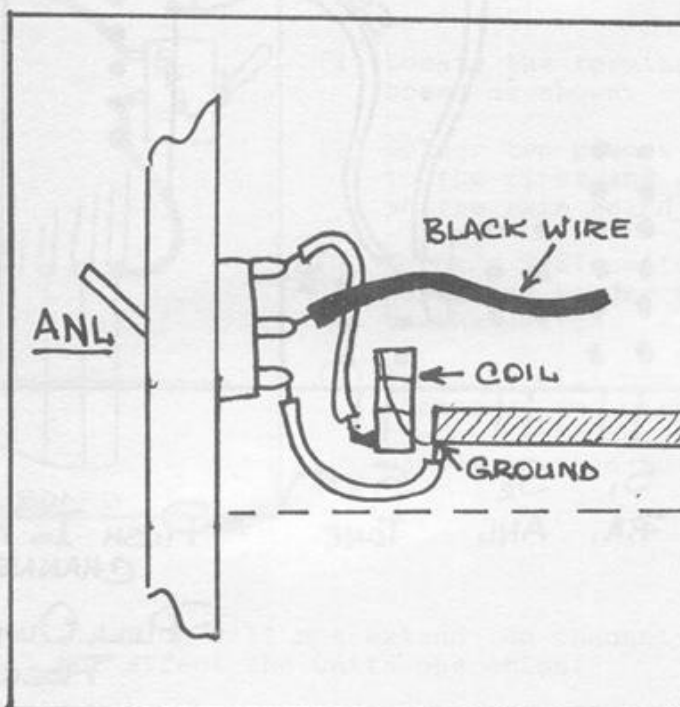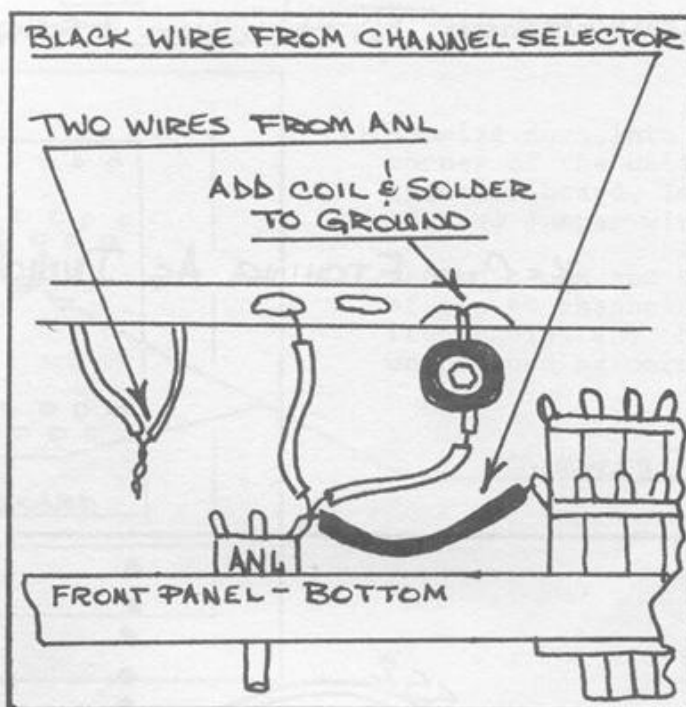

ROBYN WV-23
ADDING (A) CHANNELS TO ROBYN UNITS

- (1) Remove unit from its cabinet and locate the black wire from the channel selector to the ground foil on the front edge of the board.
- (2) Remove the two wires from the ANL switch and solder them together. Tape them up and bend them out of the way.
- (3) Solder a 2 in. piece of hookup wire from the bottom of the ANL switch to the ground on the board.
- (4) Solder a 2 in. piece of wire to a #4204 Miller coil and mount it as shown.
- (5) Solder the black wire from the channel selector to the center of the ANL switch.
- (6) Connect the wire from the coil to the top of the ANL switch as shown.
- (7) Connect the power and antenna to the unit. Put the channel selector on channel 1 with the ANL switch in the off position, and adjust the coil until channel 2 is received. If a frequency counter is available, adjust the transmit frequency to 26.975.


The unit will now transmit on all of the (A) channels 3A through 23A. When the ANL switch is in the off position the unit will be normal on all channels. With the switch on, the selector can be used on channels 3, 7, 11, 15, 19, 22, and 23, adding seven new channels to the unit.

The unit described here is the WV-23, but this can be done to almost any of the Robyn units with a switch and a little ingenuity.


Royce 1-601

CONVERSION TO HIGHER FREQUENCY

* = CUT ETCHING AS INDICATED

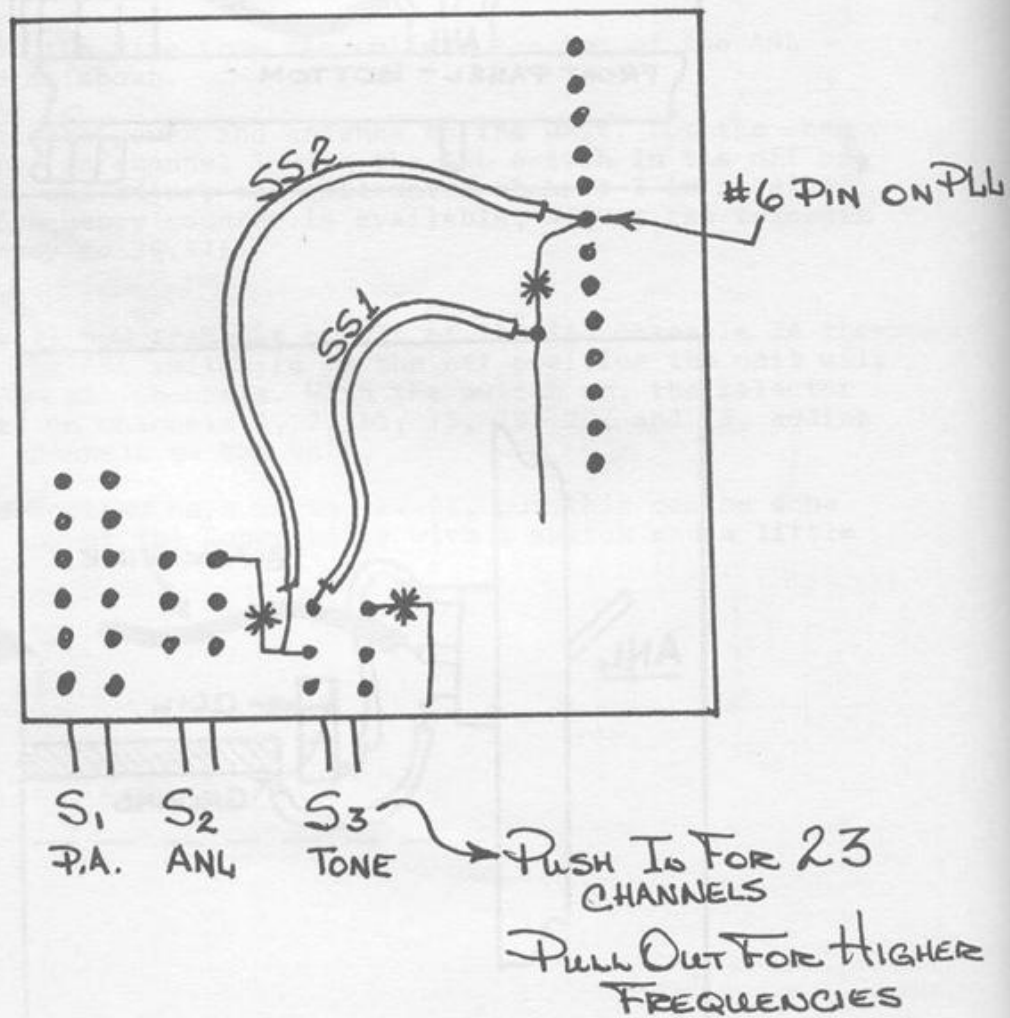


BROWNING SABRE 40 CHANNEL MODIFICATION

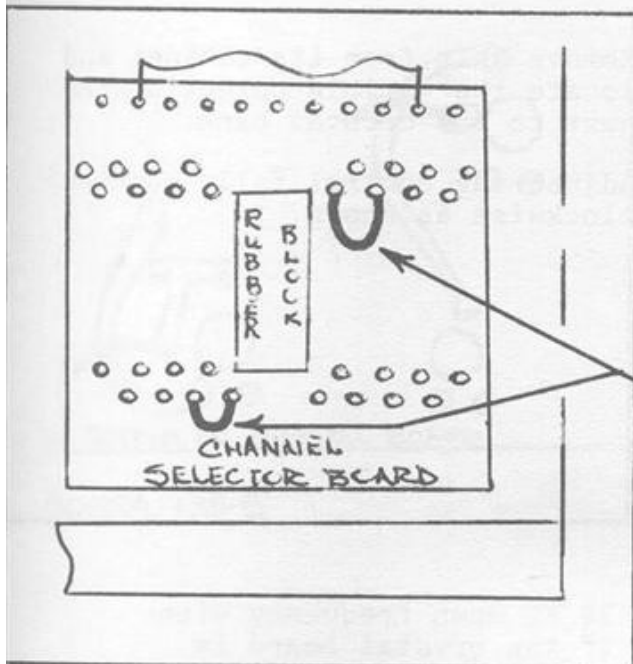

- (1) Looking down into the right hand corner of the unit on the channel selector board, locate and solder the two jumper wires as shown.
- (2) The unit can now be used on all of the 40 channels with the frequencies and channel readout corresponding correctly.

JUMPERS


EXTENDED FREQUENCY COVERAGE

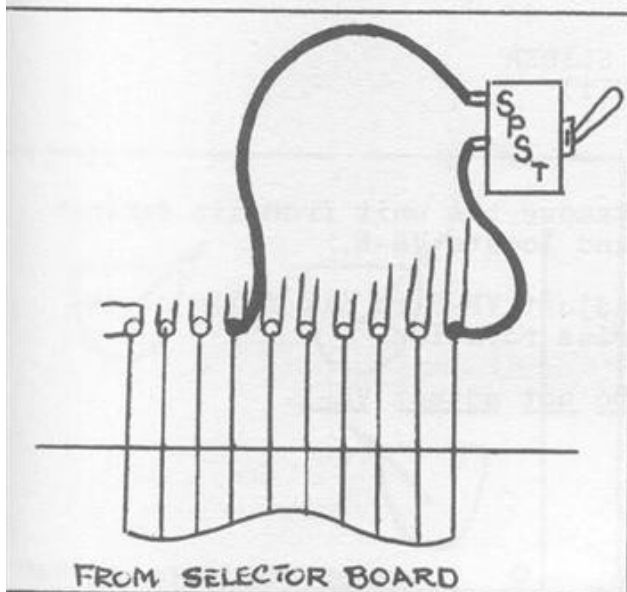

- (1) Locate the terminals on the main board as shown.
- (2) Solder two pieces of hookup wire to the first and seventh terminal on the main board as also shown.
- (3) Mount a SPST switch on the rear panel and solder the two wires to the switch.
- (4) The unit will now work on all 40 channels, and with the switch in the on position, will extend upward more than 50 channels.

NOTE: This modification will not extend the channel readout but will not affect the units operation.


COBRA 132-A, 135-A
15KC SLIDER

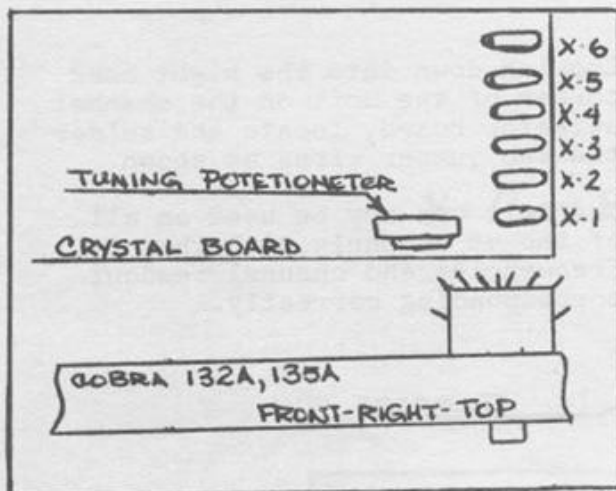

- (1) Remove unit from its cabinet and locate the variable potentiometer next to the crystal bank.
- (2) Adjust the control fully counter clockwise as shown.

NOTE: The unit will now move 15 to 20 KC down frequency with adjustment of the clarifier. If the crystal board is not shown as here the unit is probably a B model. This is shown later in this book.


COBRA 138 13KC SLIDER
(SIDEBAND UNIT)

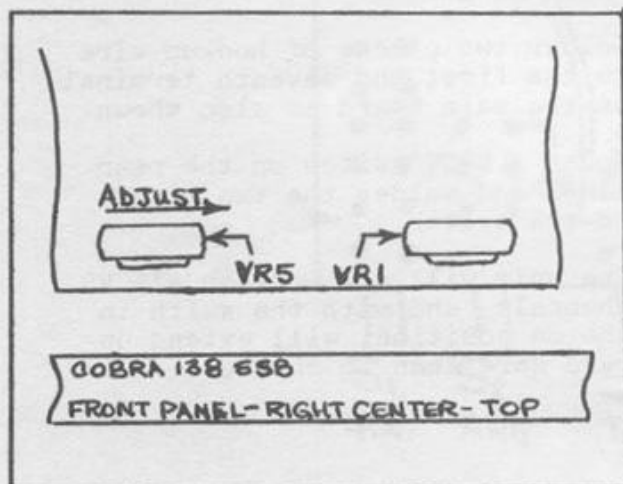

- (1) Remove the unit from its cabinet and locate VR-5.
- (2) Adjust VR-5 to its fully clockwise rotation.
- (3) Do not adjust VR-1.


NOTE: The unit will now move frequency with the clarifier control approximately 13 to 15KC.

COBRA 135-B
15KC SLIDER

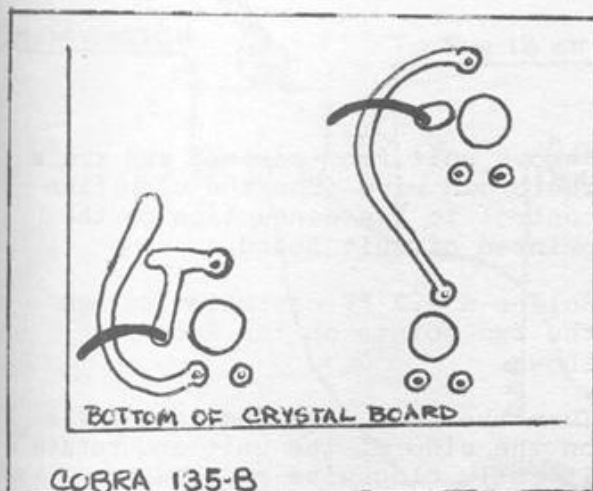


- (1) Remove the unit from its cabinet and locate the crystal board and remove the screws holding it.
- (2) Carefully turn the unit over and solder a small piece of wire across the points shown.
- (3) Re-mount the crystal board back in its place and adjust the three controls on the top of the board as shown.


NOTE: There are many versions of the 135 crystal board due to various design changes. The one shown here is the most common and the others can be changed in the same manner.

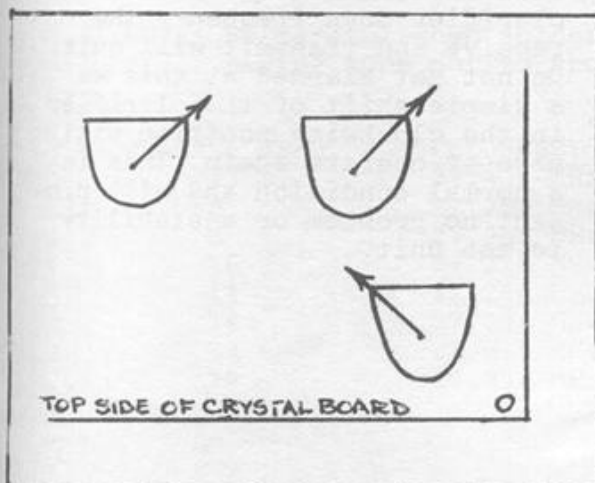

COBRA 139
15KC SLIDER
SIDEBAND BASE

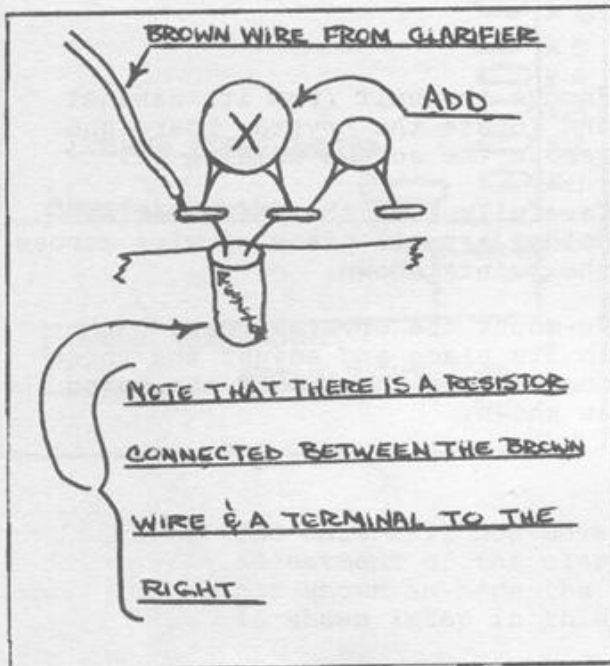


- (1) Remove unit from cabinet and trace the brown wire from the clarifier control to its connection on the printed circuit board.
- (2) Solder a 3.3 PF capacitor across the two points on the board as shown.
- (3) Turn the unit over and locate VR5 on the side of the unit and rotate it fully clockwise as shown.
- (4) The unit will now move 15 to 20KC from center by adjusting clarifier. (see note)

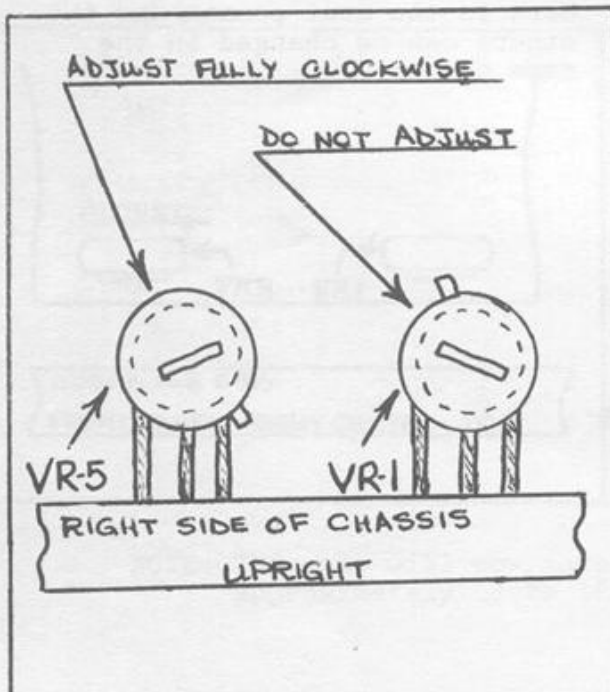

NOTE: If the channel selector is changed to a different channel with the clarifier down frequency the receive and transmit will quit. Do not get alarmed at this as a simple shift of the clarifier in the clockwise position will make it operate again. This is a normal condition and will present no problem or instability to the unit.

COURIER CENTURION PLL, GLADIATOR PLL
PEARCE SIMPSON SIMBA PLL, CHEETAH PLL
39 CHANNEL MODIFICATION

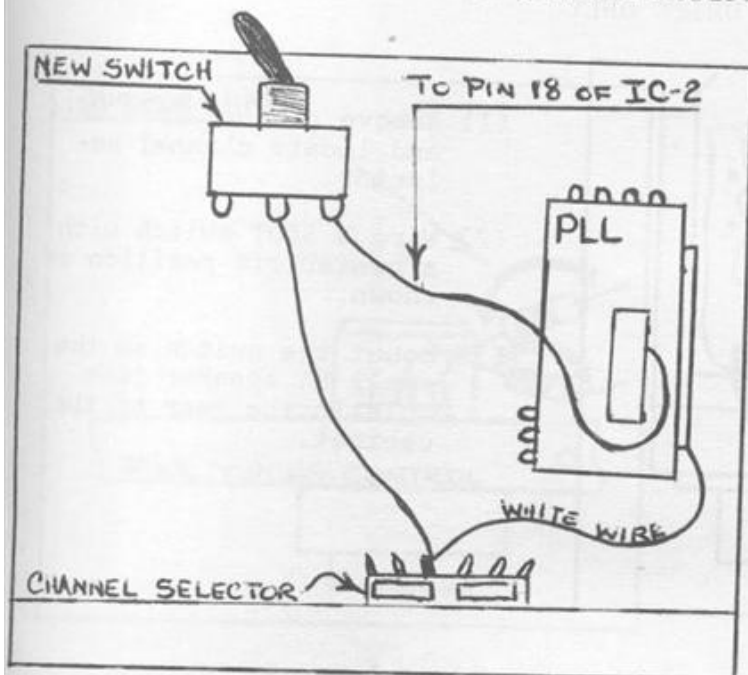


- (1) Remove top cover of unit and locate PLL box to the right side.
- (2) Remove the top cover of the PLL box and the rubber block on top of the integrated circuit.
- (3) Solder a small piece of wire 8 in. long to Pin 18 of the integrated circuit, this will be the 7th pin back towards the front panel on the right side.
- (4) Push the wire through the hole in the left side of the box and re-install the rubber block and cover to the box.
- (5) Solder the other end of this wire to a switch and mount the switch to the back panel of the unit.
- (6) Solder another piece of wire to the center of the switch and the other end to the white wire connected to the channel selector as shown.

NOTE: Be careful when soldering the wire to the integrated circuit making sure not to short any other pins.

CHANNEL USED	FREQUENCY	CHANNEL USED	FREQUENCY
7	27.435 MHz	15	27.335 MHz
8	27.255 MHz	16	27.355 MHz
9	27.265 MHz	17	27.365 MHz
10	27.275 MHz	18	27.375 MHz
11	27.285 MHz	19	27.385 MHz
12	27.305 MHz	20	27.405 MHz
13	27.315 MHz	21	27.415 MHz
14	27.325 MHz	22	27.425 MHz

HY-GAIN & PEARCE SIMPSON
INCREASED CHANNEL CAPABILITY
PLL UNITS ONLY

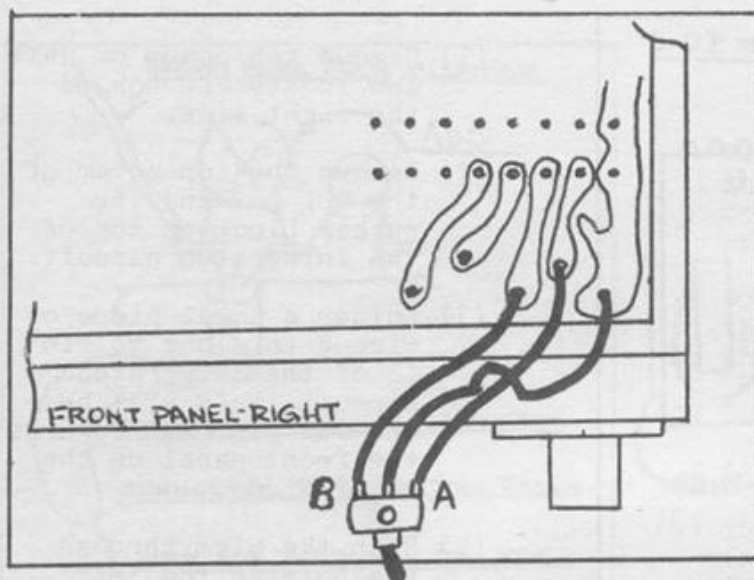


- (1) Remove cabinet from unit and locate channel selector.
- (2) Wire a SPDT switch with a center off position as shown.
- (3) Mount the switch in the small PA speaker jack hole in the rear of the cabinet.

NOTE: These units have been changed so many times the unit may not perform exactly as the chart frequencies. In any case, the frequencies covered are dependent on the integrated circuit used. I have noticed that the units that are labeled 01A in the schematic will go up to 27.425 MHz. The units labeled 02A will only hit 27.275 MHz.

CHANNEL	<u>A</u>	FREQUENCY
1		27.165 MHz
2		27.175 MHz
3		27.185 MHz
4		27.205 MHz
5		27.215 MHz
6		27.225 MHz
7		27.235 MHz
8		27.255 MHz
9		27.265 MHz
10		27.275 MHz
11		27.285 MHz
12		27.305 MHz
13		27.315 MHz
14		27.325 MHz
15		27.335 MHz
16		27.355 MHz


CHANNEL	<u>B</u>	FREQUENCY
1		27.365 MHz
2		27.375 MHz
3		27.385 MHz
4		27.405 MHz
5		27.415 MHz
6		27.425 MHz

HY-GAIN 623
20KC SLIDER AND POWER INCREASE


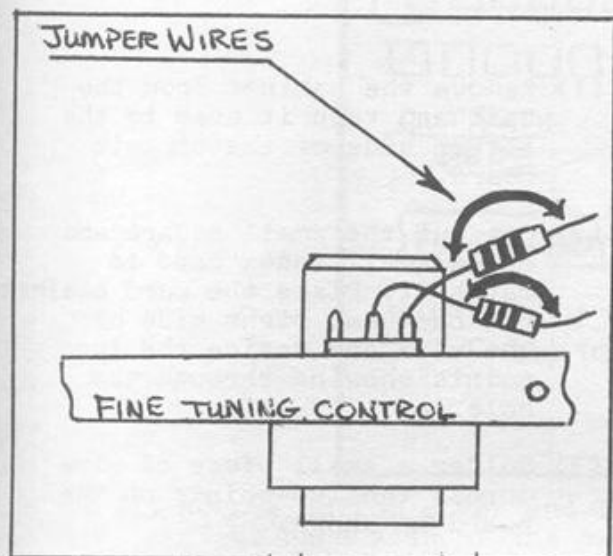


- (1) Remove bottom and top cover and locate range limiting resistors on fine tune control.
- (2) Solder jumper wires across them as shown.
- (3) Locate the wire in front of the power transformer and move it to the empty pin directly behind it, as shown.

NOTE: This modification will result in 20KC coverage of the fine tune control and a power output on SSB of about 20 watts.

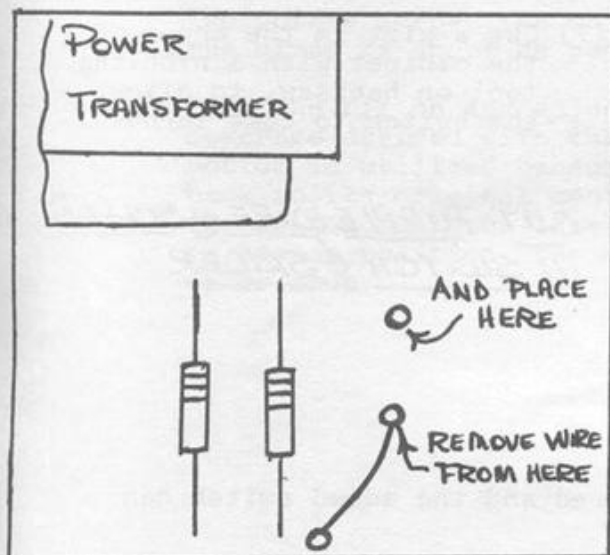

JOHNSON 352 15KC SLIDER

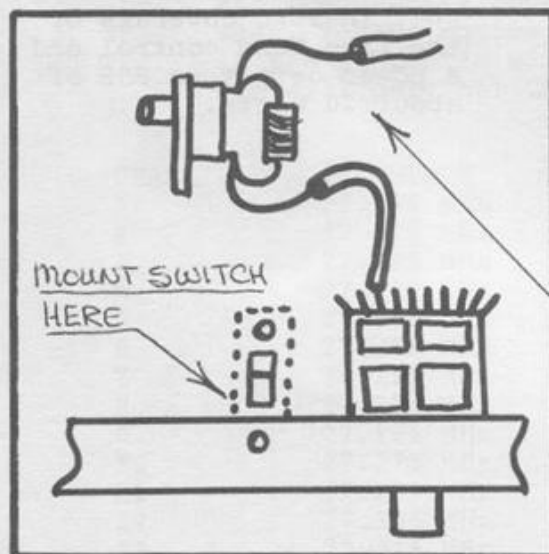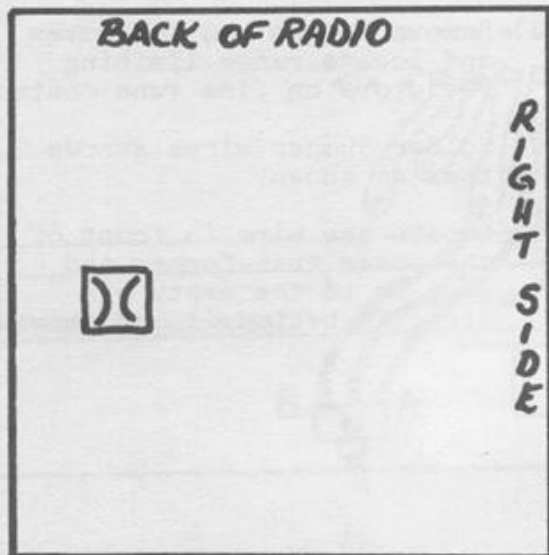


- (1) Remove the cabinet from the unit and turn it over to the bottom side of the circuit board.
- (2) Cut out the small square and cut a small index card to match it. Place the card against the back and right side of the unit and notice the two points showing through the hole.
- (3) Solder a small piece of wire across the two points on the board as shown.
- (4) Obtain a small SPST switch and solder a 10UH RF choke across it as shown.
- (5) Cut the purple wire from the channel selector and solder the two ends across the switch.
- (6) Drill a small hole in the front panel lip and mount the switch as shown.
- (7) Cut a slot in the cover of the cabinet with a nibbling tool or hacksaw, to allow the switch to come through.


CUT PURPLE WIRE & SOLDER
IN SWITCH & SLIDER

NOTE: The CB, PA switch can be rewired and the added switch can be eliminated.

MIDLAND 13-898B
15KC SLIDER

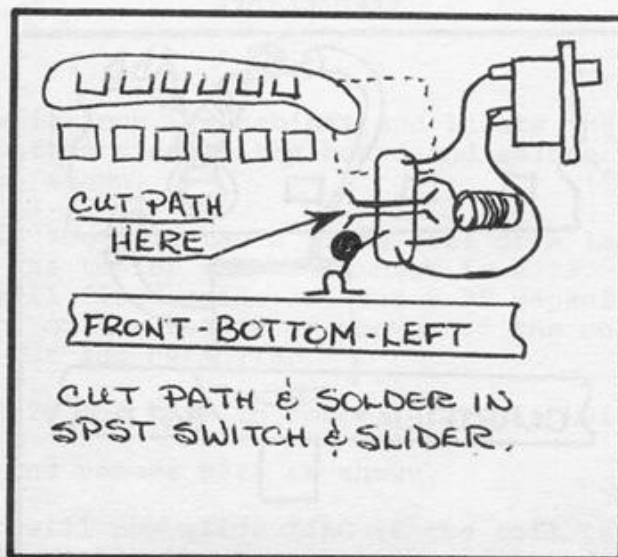

- (1) Remove bottom cover and locate the circuit path to the right hand side of the crystal bank just behind the front panel as shown. With an X-ACTO knife or a single edge razor blade, cut the path in the center as also shown.
- (2) Solder a Miller #4205 adjustable coil across the two points on the board that have just been cut.
- (3) Drill a small hole in the left front edge of the unit and mount a small SPST switch with one screw. A better view of this can be found under SBE Console II later in this book.
- (4) Solder two wires across the switch and solder them to the two points across the choke on the board as shown. keep the wires as short as possible.
- (5) Turn the rig on and adjust the choke for the frequency coverage desired with the clarifier. The switch on the bottom is utilized because the clarifier will not come back to its original center frequency, in other words, the switch could be labeled variable and normal because in its on position, the clarifier works normal or 1KC up or down.

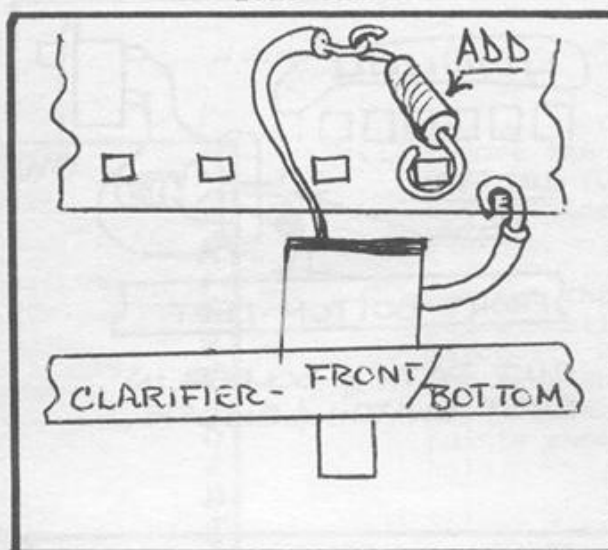
MIDLAND 13-898
15KC SLIDER

- (1) Remove the unit from its cabinet and locate the wire to the clarifier from the fourth terminal on the board.
- (2) Remove the wire and add a 20 UH RF choke in series with the wire as shown. See note below.



NOTE: The RF choke is made by connecting two 10 UH RF chokes in series or by using a Miller #4205 adjustable coil.

PACE 1000
SLIDER

- (1) Remove unit from its cabinet and locate the metal strip on the bottom side of the board and solder the small wire jumper as shown.
- (2) Notice if the unit has a fixed coil or a large adjustable coil on the top of the board next to R225. If the unit has a small fixed coil, add a 6.2 PF capacitor across the two point on the bottom as shown. If the coil is adjustable do not add capacitor.
- (3) Adjust R226 and R227 to their fully clockwise position.
- (4) Cut out and remove R225 as shown.
- (5) The unit will now slide 15KC if the coil is fixed or if it is adjustable the range can be adjusted appropriately.
- (6) If it is desired the pink wire from the channel selector can be cut out and removed to make the 22A position active on the channel selector.

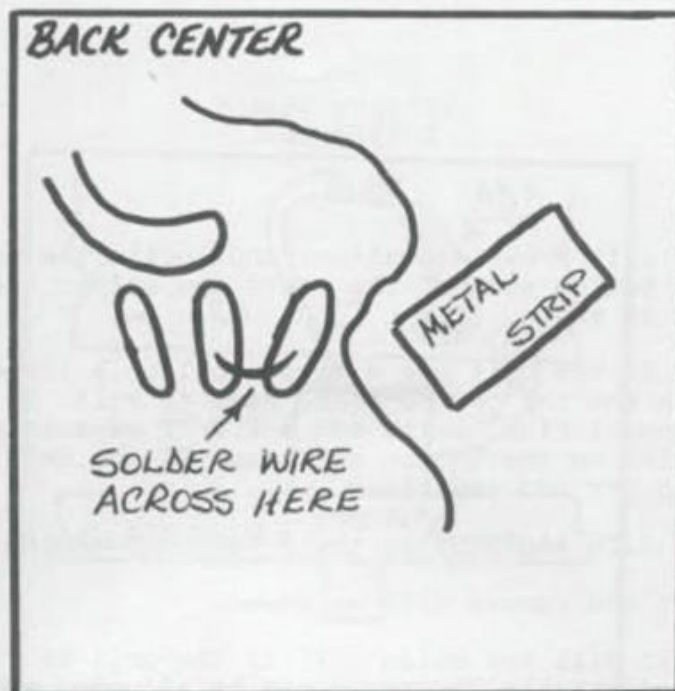


PAGE 1000 SLIDER

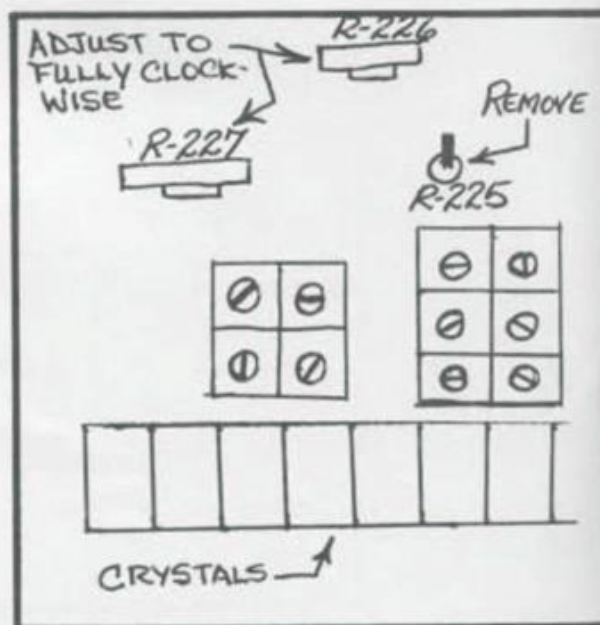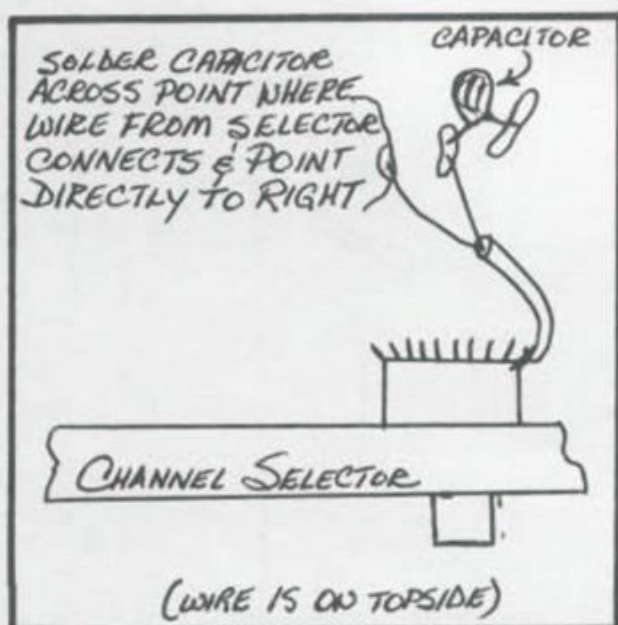

PACE DX1023B
20DC SLIDER

- (1) Remove unit from its cabinet.
- (2) Unsolder the gray wire coming from the channel selector to the board and add a 10UH RF choke in series with it.
- (3) Unsolder the two yellow wires from the ANL switch to the two points on the board as shown, and cut them to 3½ in.
- (4) Solder a short jumper across the two wires from the ANL switch as also shown.
- (5) Solder the two yellow wires across the 10UH RF choke.

NOTE: The ANL will be operational continuously after this modification and the switch will be used as a normal or variable switch for the slider.

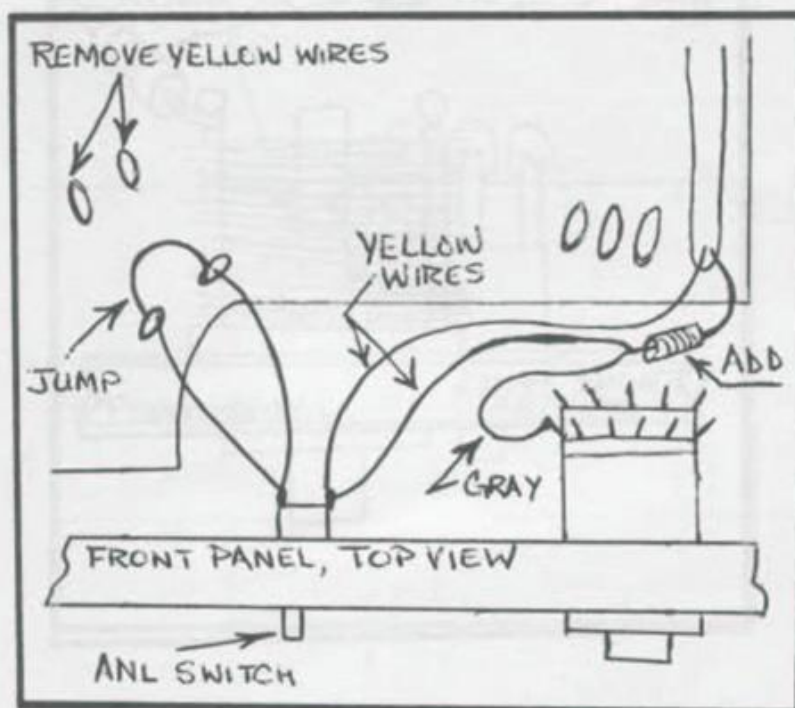


PEARCE SIMPSON CHEETAH, BENGAL, SIMBA
15KC SLIDER

- (1) Remove the unit from its cabinet and locate the white wire on the clarifier.
- (2) Remove the wire and place an RF choke in series with the wire and capacitor as shown.
- (3) The RF choke is made from fixed value RF chokes connected in series. See note below.

NOTE: For the Simba and Cheetah the RF choke is made from a 10 UH and 1 UH connected in series. A Miller #4204 can be used and adjusted.


For the Bengal a variable Miller #4204 can be used or any adjustable coil with a 3 to 15 UH range.

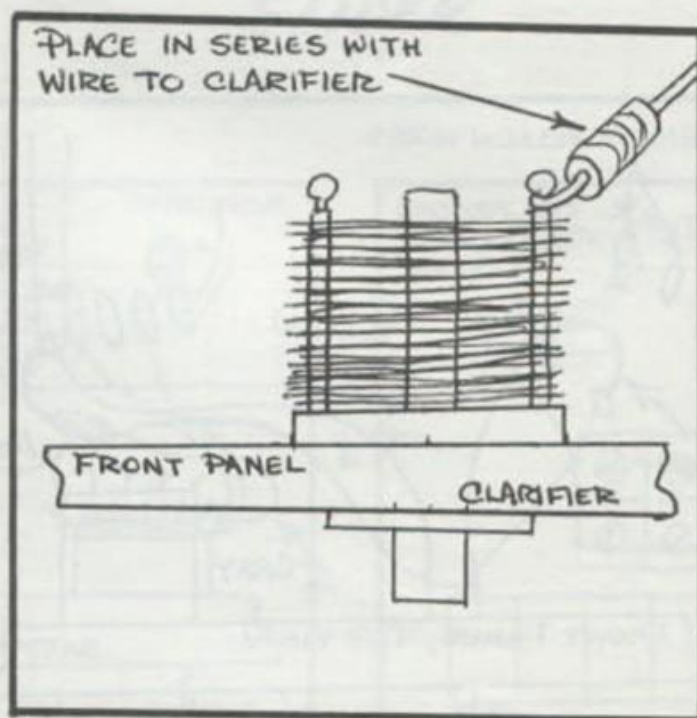

REALISTIC TRC-47
12KC SLIDER FOR SSB

- (1) Remove the unit from its cabinet and locate the left terminal on the clarifier control as shown.
- (2) Unsolder or cut this wire loose from the board and solder a 3.3 UH RF choke in series with it.


NOTE: The RF choke can be the miniature type as space is limited in this type of unit. If it is desired to slide the AM side, the same procedure can be followed on the right side of the clarifier control.

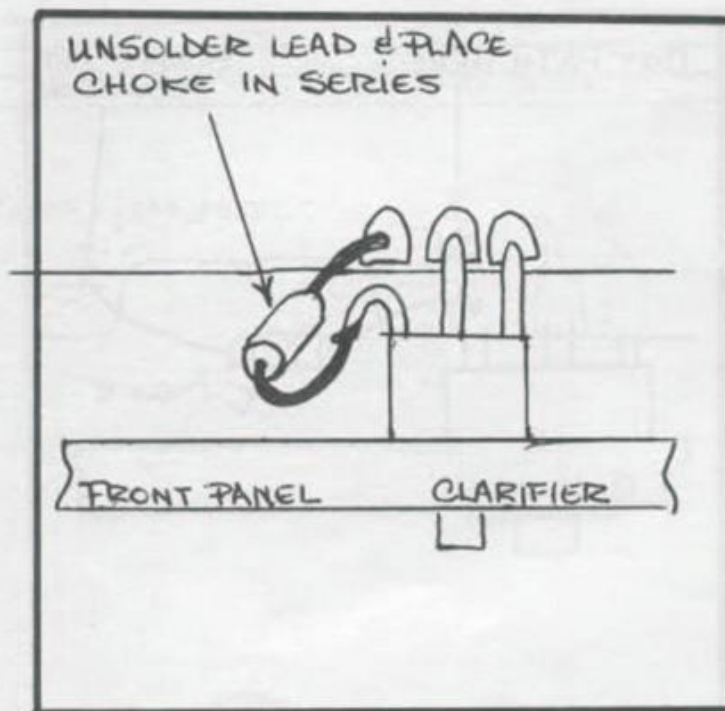

REALISTIC TRC-48
25KC SLIDER FOR SSB

- (1) Remove the unit from its cabinet and locate the right hand path of the clarifier control as shown.
- (2) Cut the path from the control with a single edge razor blade and solder a 5.6 UH RF choke to the control terminal.
- (3) Scrape off the insulation on the cut away path on the opposite side of the indentation and solder the other end of the RF choke.

NOTE: To use the slider, the channel selector must be turned to the channel above the one you are using. The clarifier will tune down approximately 25KC on lower sideband only. If it is desired to slide the AM and USB side the same procedure can be followed on the left side of the clarifier control.

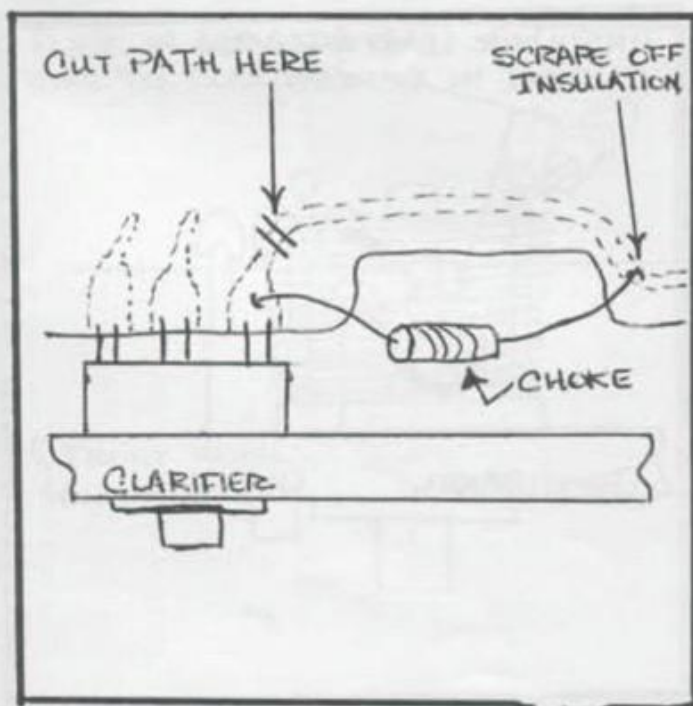

TEABERRY
52 CHANNEL CAPABILITY


CHANNEL	LOW ⁻	CENTER ^o	HIGH ⁺
1		Normal	27.285 MHz
2			27.295 MHz
3	(15A) 27.145		27.305 MHz
4			27.325 MHz
5			27.335 MHz
6			27.345 MHz
7	(19A) 27.195		27.355 MHz
8			27.375 MHz
9			27.385 MHz
10	(22A) 27.235		27.395 MHz
11	(22B) 27.245		*27.405 MHz
12	(23A) 27.265		27.425 MHz
13	(23B) 27.275		27.435 MHz
14			27.445 MHz
15			27.455 MHz
16			27.475 MHz
17			27.485 MHz
18			27.495 MHz
19			27.505 MHz
20			27.525 MHz
21			27.535 MHz
22			27.545 MHz
23		Normal	27.575 MHz

* See note on first page.

SEARS AND PINTO SSB 13KC SLIDER

- (1) Remove the top and bottom cover and locate the six crystals on the Sub-board.
- (2) Cut the circuit paths to each of the six crystals on the top as shown, and solder a jumper wire across all six crystals.
- (3) Unsolder the brown wire on the right side of the main board and resolder it to the cut away path of the end crystal to the right side. This path goes to the end trimmer capacitor on the top side and will have to be adjusted later.
- (4) Unsolder the white wire and move it down to the unused terminal just below. Solder a 10 UH choke from this point and the other end to the added jumper wire on the sub-board as shown.


NOTE: The unit will now slide down 13 to 15KC on transmit but the receive will not track with the transmit. The trimmer capacitor as mentioned earlier, will now have to be adjusted so that the receive will track exactly with the transmit frequency. The best way to do this is to talk to another station on lower sideband, not disturbing the clarifier, and adjust the trimmer for closest clarity.

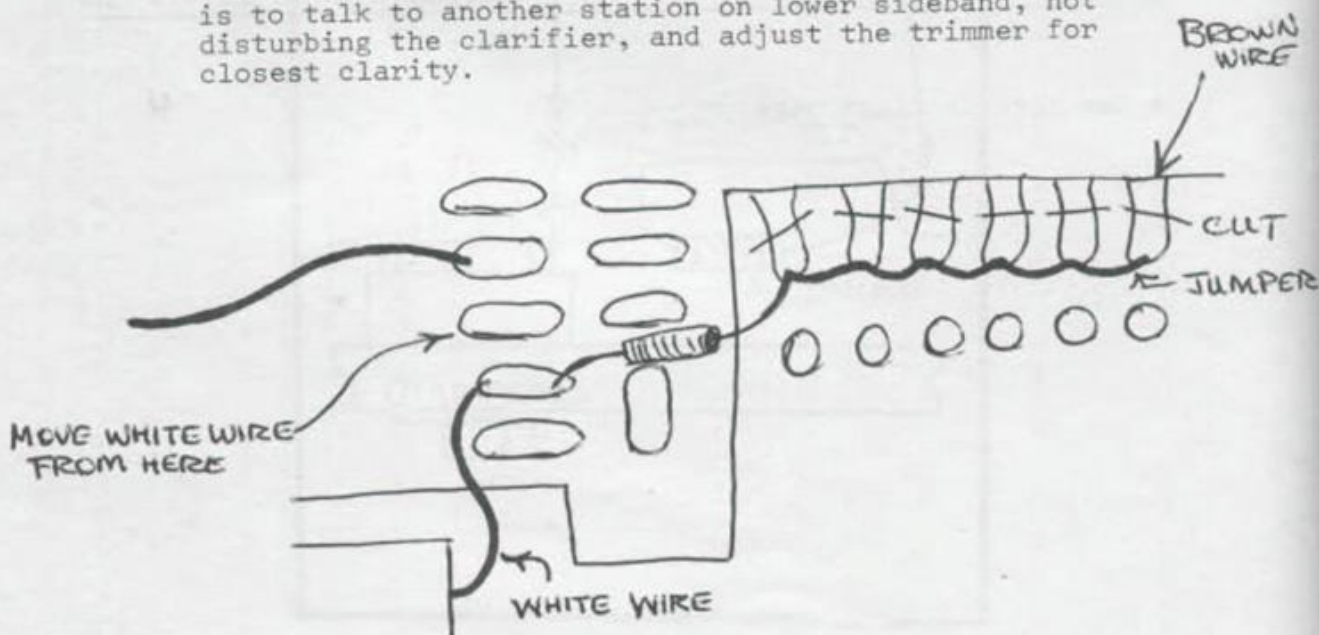


SILTROMIX SSB
12KC SLIDER

- (1) Remove unit from cabinet and locate the relay on the bottom.
- (2) Remove the 47PF capacitor on the relay.
- (3) Remove the green wire on the relay and resolder it to the board where the capacitor was removed.
- (4) With a single edge razor blade, cut the ground path of the crystal bank as shown.
- (5) Solder a piece of bare hookup wire to the cut away path and loop it around to every other point as shown. Starting with the first making 7 connections in all.
- (6) L112 on the top side of the board may have to be adjusted slightly to give the proper range.


NOTE: The unit will stop oscillating if L112 is not adjusted properly.

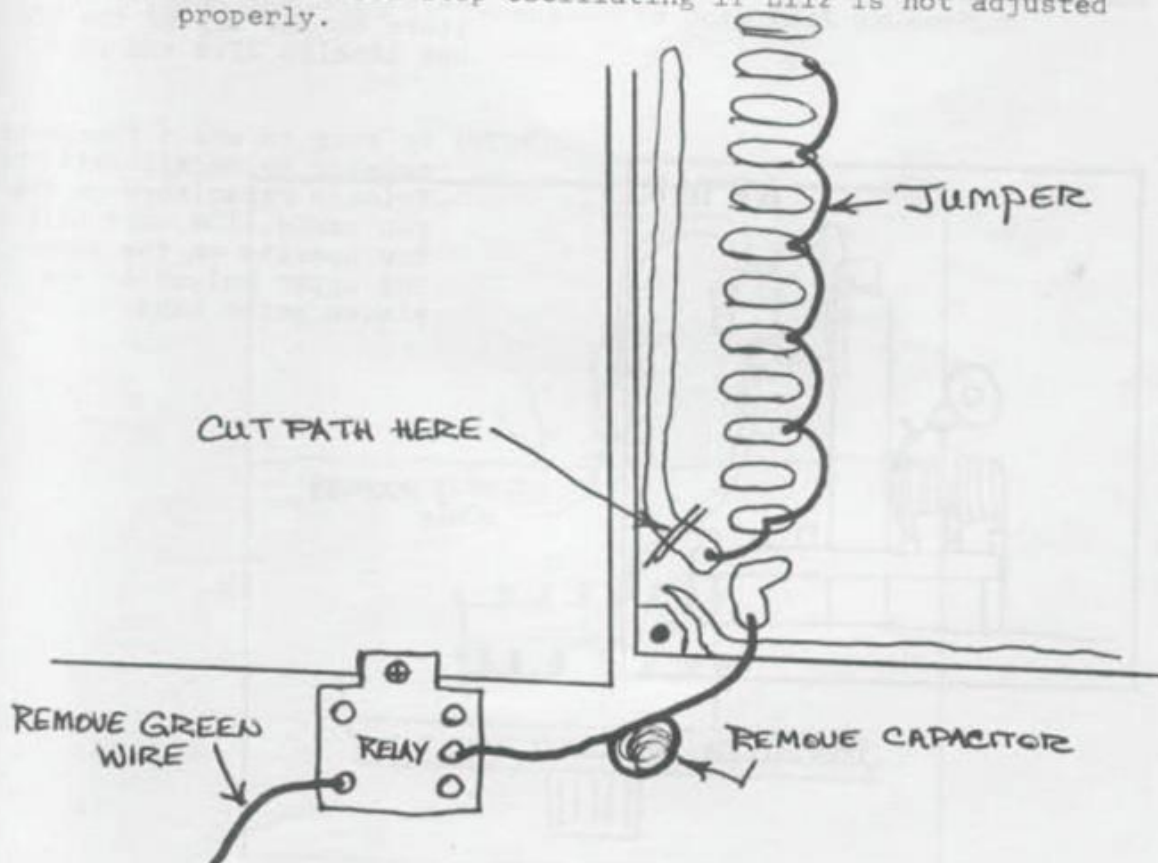

SILTRONIX 1011C AND 1011D
27.5 MHz to 28.0 MHz

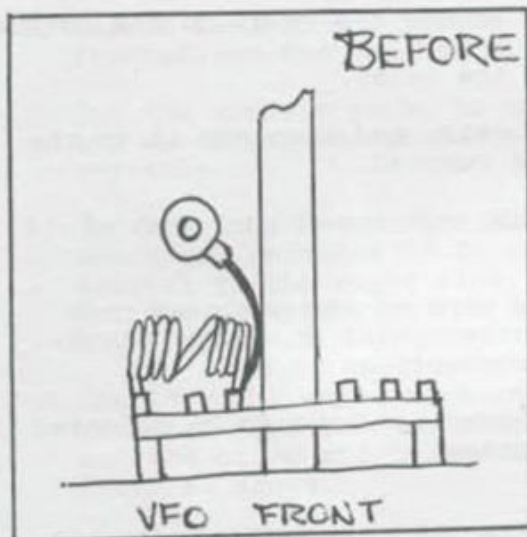

- (1) Remove cabinet from unit and remove the screws and cover of the VFO box.
- (2) Unsolder the coil and scrape off the insulation from the coil in its center as shown.
- (3) Solder a short piece of wire to the center of the coil as shown.
- (4) Resolder the coil back into place and connect the wire to the 28.5 MHz position instead of the end as it was.
- (5) Replace the VFO cover and calibrate the two ranges by adjusting the trimmer capacitors on the top of the VFO box labeled 27.0 and 28.5.

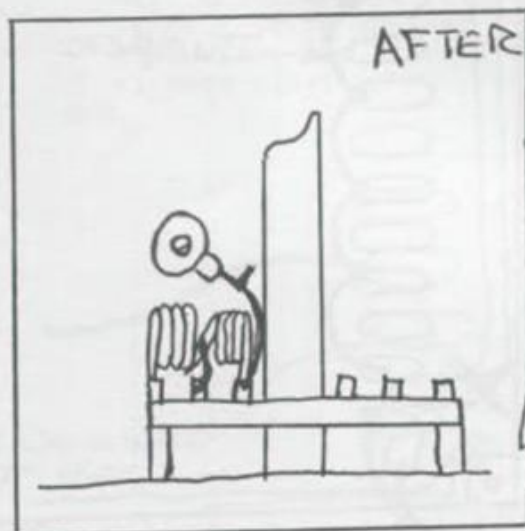


NOTE: Be sure to use a frequency counter to recalibrate the trimmer capacitors on the two bands. The unit will now operate on the lower and upper halves of the eleven meter band.

SBE SIDEBANDER II
15 KC SLIDER

- (1) Remove the unit from its cabinet and locate the short green wire on the bottom side of the unit as shown.
- (2) Remove the green wire making note of the terminal it is removed from.
- (3) Obtain a small SPST slide switch and solder a 10UH RF choke across it.
- (4) Solder two pieces of wire 3½ in. long to each side of the switch and to the two points from which the green wire came.
- (5) Mount the switch to the bottom of the front panel by drilling a small hole and inserting a screw.
- (6) Cut a slot in the cover of the unit to allow the switch to come through. Making sure to cut the right edge of the cabinet.


NOTE: The switch is used for normal or variable frequency operation and is necessary to come back to center.

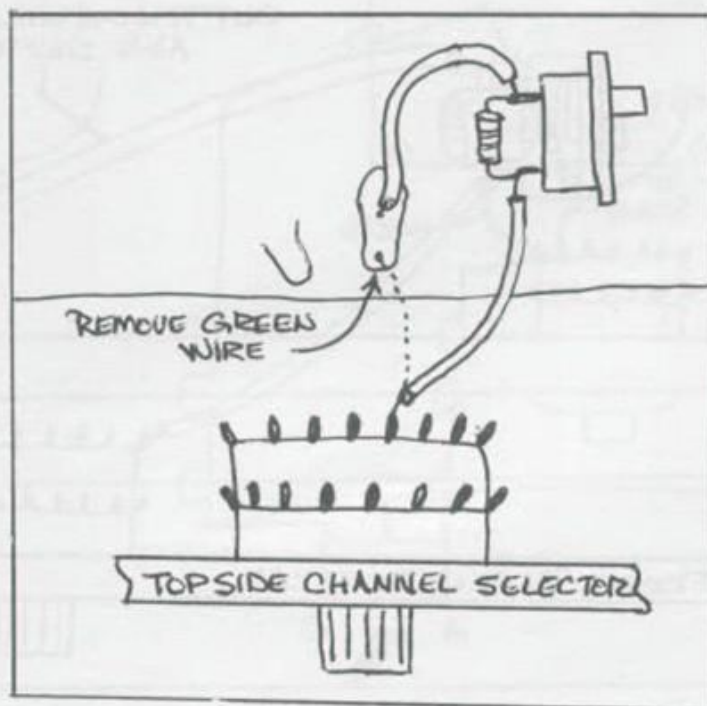

SBE CONSOLE II 15KC SLIDER

- (1) Remove the bottom cover of the unit and locate the yellow wire on the left side of the channel selector.
- (2) Drill a small hole in the left edge of the chassis approximately $\frac{3}{4}$ in. from the front.
- (3) Obtain a small SPST slide switch and solder a 10UH RF choke across the terminals as shown.
- (4) Cut the yellow wire and solder the two ends across the switch as also shown.
- (5) Mount the switch in the small hole with one screw.
- (6) Place the bottom cover over the unit and locate the center of the switch and drill a hole to allow the switch to come through as shown.


NOTE: The switch is used to give the unit normal or variable frequency coverage.

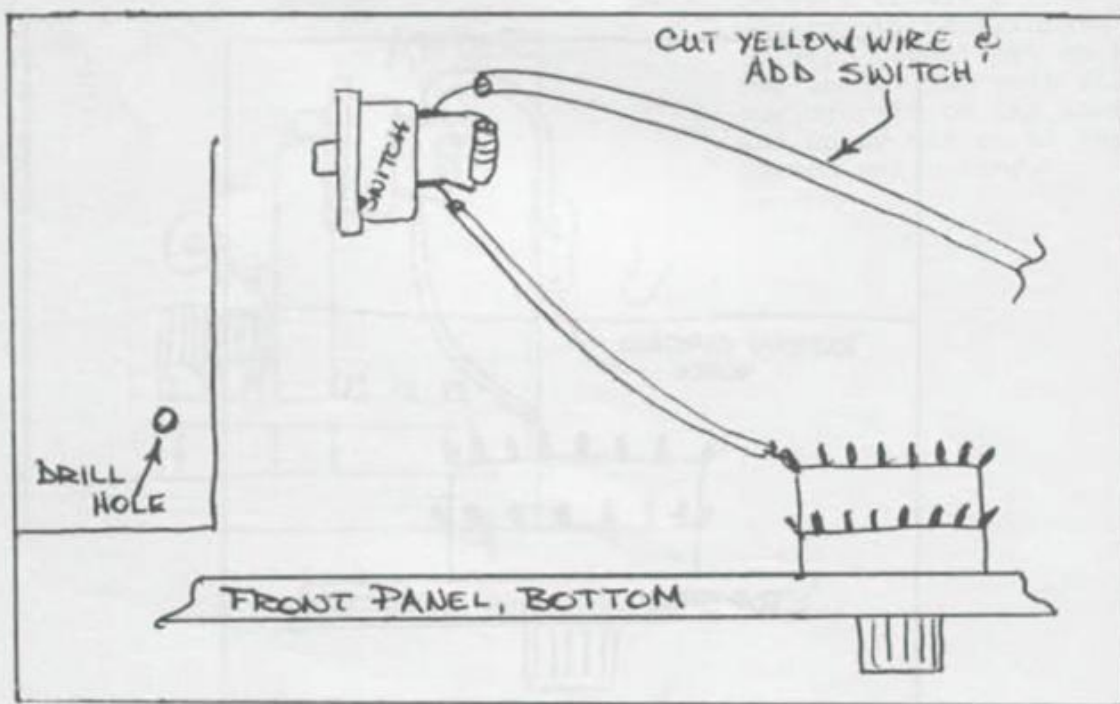

SBE FORMULA D
51 CHANNEL CONVERSION

- (1) Remove cover from the unit and locate the three points as shown. The green and black wire are connected to the channel selector running to the board. The third point is located just to the left of the green wire on the board.
- (2) Mount a SPDT mini switch in the side of the unit by drilling a hole or in the rear by removing the PA speaker jack.
- (3) Wire the switch as shown, making sure that the wire to the center pole of the switch goes to the connection with the black wire from the channel selector.


NOTE: The switch must have a center off position to make the unit operate normal. See next page for frequency chart. If it is not desired to add a switch to the unit, remove the two wires to the local distance switch and wire them to the center and B side connections on the board. This will eliminate the A side of the switch but 46 channels will still be obtained.

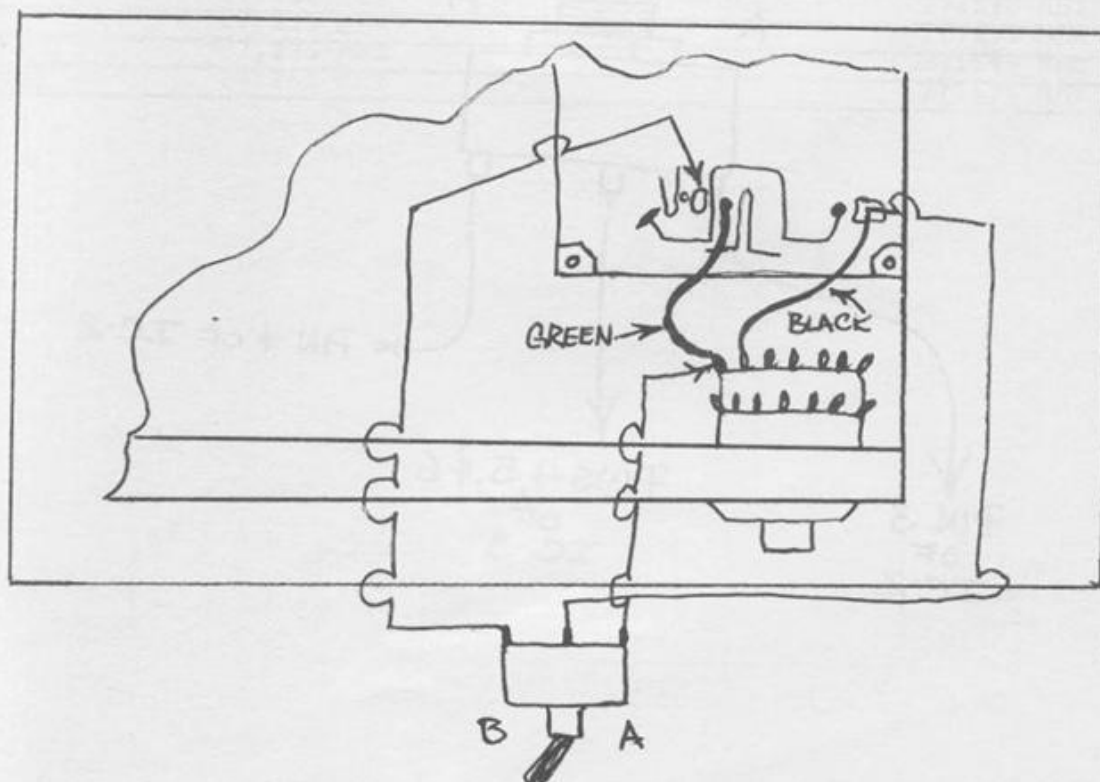

SBE FORMULA D TOUCH COM
51 CHANNEL CONVERSION

- (1) Remove unit from cabinet and locate pins of integrated circuits shown.
- (2) Remove PA speaker jack from rear of unit or drill a hole in the side of the chassis and mount the switch.
- (3) Solder three wires to the pins of the switch, and wire unit as shown.

NOTE: More information and a better view is shown in this book under Formula D, the basic PLL board is the same. The frequencies can be obtained from the chart.

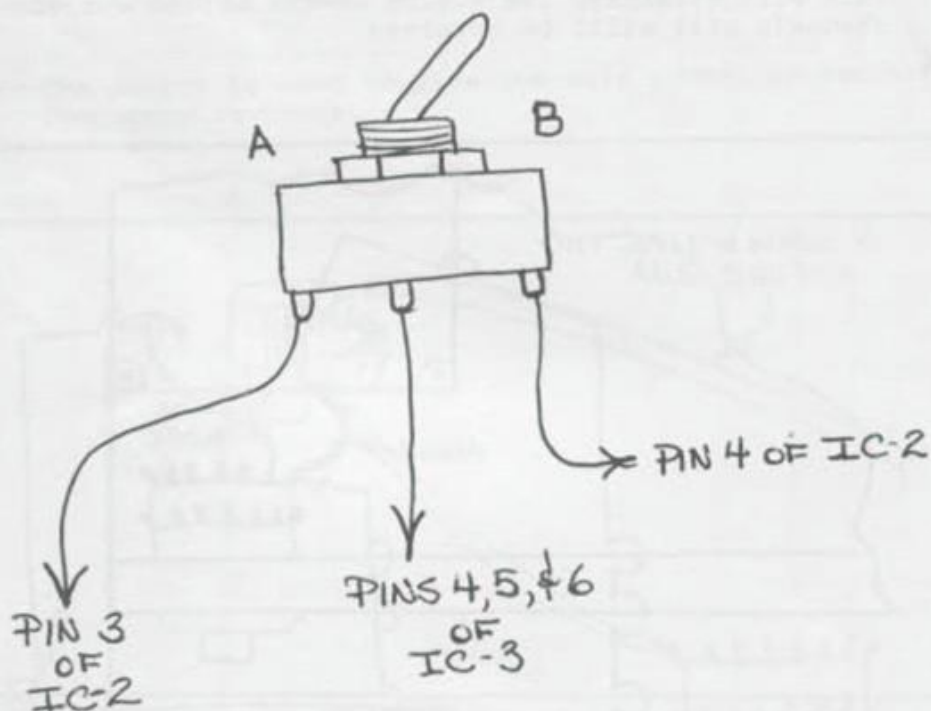


SBE FORMULA D AND TOUCH COM
51 CHANNEL CAPABILITY

CHANNEL	CENTER OFF	POSITION 1	POSITION 2
1	26.965 MHz	27.125 MHz	27.285 MHz(28)
2	26.975 MHz	27.135 MHz	27.295 MHz(29)
3	26.985 MHz	27.145 MHz	27.305 MHz(30)
4	27.005 MHz	27.165 MHz	27.325 MHz(32)
5	27.015 MHz	27.175 MHz	27.335 MHz(33)
6	27.025 MHz	27.185 MHz	27.345 MHz(34)
7	27.035 MHz	27.195 MHz	27.355 MHz(35)
8	27.055 MHz	27.215 MHz	27.375 MHz(37)
9	27.065 MHz	27.225 MHz	27.385 MHz(38)
10	27.075 MHz	27.235 MHz(23)	27.395 MHz(39)
11	27.085 MHz	27.245 MHz(24)	27.405 MHz(40)
12	27.105 MHz	27.265 MHz(26)	27.425 MHz
13	27.115 MHz		27.435 MHz
14	27.125 MHz		27.445 MHz
15	27.135 MHz		27.455 MHz
16	27.155 MHz		27.475 MHz
17	27.165 MHz		27.485 MHz
18	27.175 MHz		27.495 MHz
19	27.185 MHz		27.505 MHz
20	27.205 MHz		27.525 MHz
21	27.215 MHz		27.535 MHz
22	27.225 MHz		27.545 MHz
23(25)	27.255 MHz		27.575 MHz

TRAM DIAMOND 60
15KC SLIDER

- (1) Remove the unit from its cabinet and locate the three points shown.
- (2) Solder the points together with a small piece of wire as also shown.
- (3) Adjust the 500r Resistor in the counter clockwise direction until the bottom range desired is reached.
- (4) If the range is not desired or will not drop as far as desired, L301, located just to the left of the three pots, can be adjusted clockwise to increase the down range.

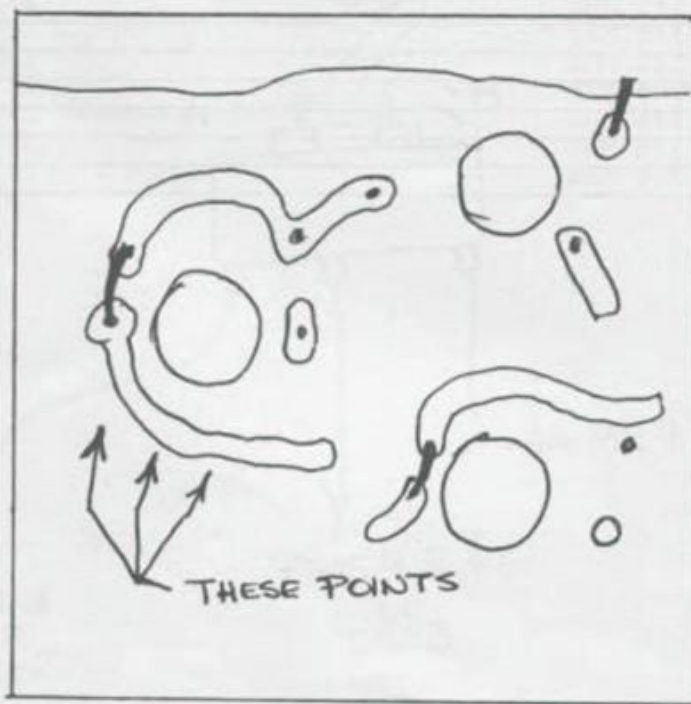


TRAM DIAMOND 60, COBRA 132B & 135B
BROWNING LTD
46 CHANNEL ADAPTOR

- (1) Remove cabinet from unit and unsolder the 12.800 MHz crystal from the synthesizer board at the front of the unit.
- (2) Obtain a DPDT miniature switch and a 13.100 MHz crystal and wire them as shown.
- (3) Wire two pieces of insulated wire from the two center posts of the switch and back to the two holes of the removed crystal.

NOTE: The switch can be mounted on the side of the mobile units just behind the channel selector. On the base unit the switch must not be mounted too far away from the board because of the length of the wire.

CRYSTAL ORDERING INFORMATION

The special crystal can be ordered from any crystal manufacturer. Be sure to specify the type of unit it is for, the frequency (13.100 MHz), a frequency tolerance of .005% and a holder type which in this case is HC 18/U.

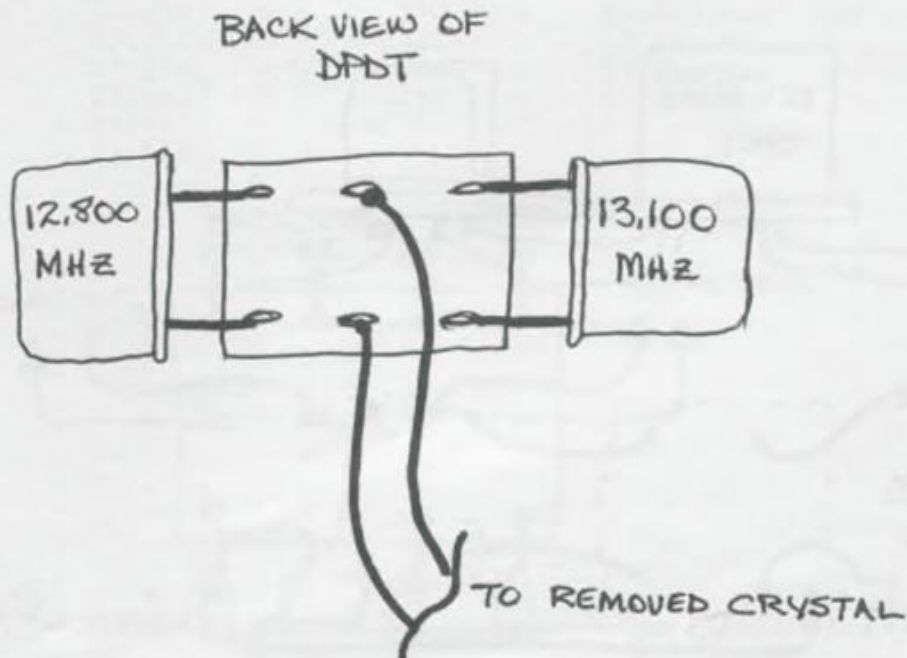


46 CHANNEL ADAPTOR

As most of you know, crystals cannot be switched with long distances of wire because of the capacitance of the wire. In many cases the crystal will either stop oscillating or will be off frequency. This adaptor will switch the crystals with a relay and the switch can be operated with any length of wire desired.

Many crystal synthesizers use what are known as IF crystals. These mix with other crystals in the radio to provide a difference in transmit and receive frequencies. If one of these two crystals were removed, the unit would not transmit on any channel, but would receive. If both were removed the unit would not transmit or receive. If the two crystals were replaced with two crystals 300 KHz lower than the original frequency, the unit would transmit and receive 300 KHz higher than the normal 23 channels. This is the basic idea behind this adaptor. Of course, two of the adaptors will have to be used to switch the two crystals, but the whole thing can be built for less than fifteen bucks including the two special crystals. The adaptor can be made from a Radio Shack mini relay and a piece of small hole vector board.

ORDERING SPECIAL CRYSTALS

Most AM units use two IF crystals, the most common is 11.275 MHz and 11.730 MHz. Therefore, the two special order crystal frequencies will have to be 10.975 MHz and 11.430 MHz respectively. These can be ordered from any crystal manufacturer, but be sure to specify the type of unit it is for, a frequency tolerance of .005%, and the type of holder which is HC25/U in most cases.

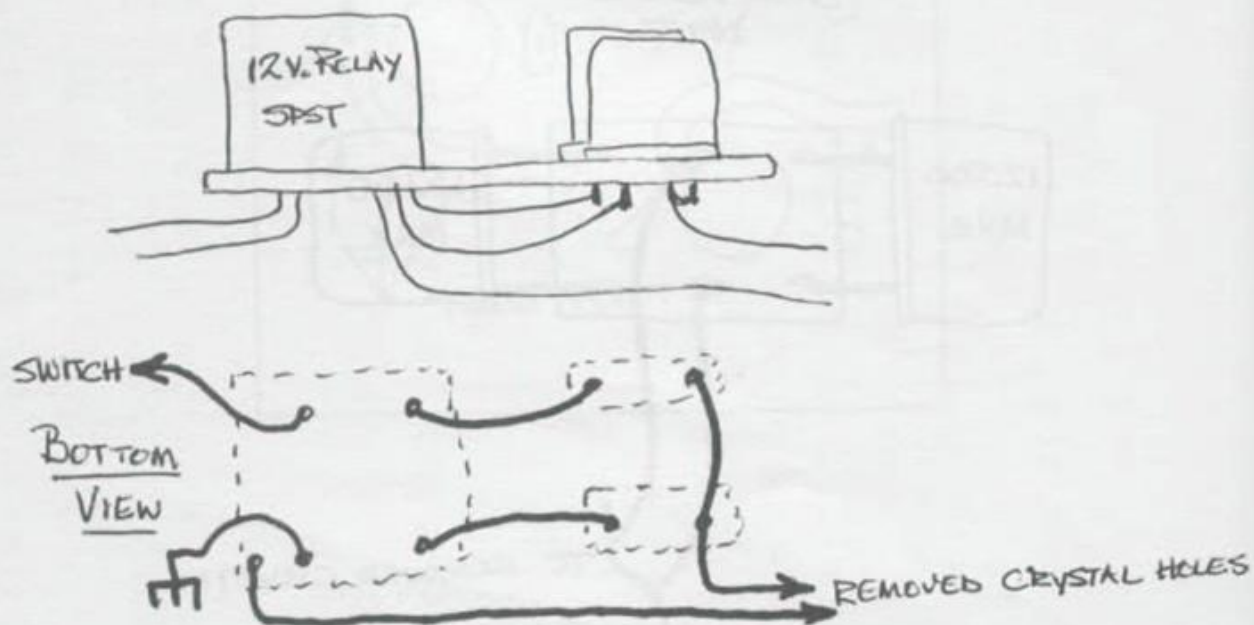

CHANNEL ADAPTOR


There are many ways of increasing the channel capability of 23 channel radios. The method shown here can be added to almost any CB radio providing there is space enough. Most radios use six master crystals which control transmit and receive for four channels each. In other words, if say X1 were removed, channels one, two, three, and four would drop out. If X1 were changed to a higher frequency, channels one through four would become some other channels. By using this idea and removing the wires from each of the first four master crystals and wiring them to a switch, the original crystals could be switched in, or a new set could be used just by flipping the switch. This would mean that on the other side of the switch, channels one through sixteen would become new channels. All that is needed for this is a four pole double throw switch and four new crystals. The wiring for this is shown in the drawing above.

CRYSTAL ORDERING INFORMATION

Due to the numerous frequencies used in different units, it is not possible to give all the frequencies listed, so therefore, I will show you how to figure your own for any set. The information here is for the new 40 channels for 1977.

First find out the frequencies for the six master crystals in your radio from the schematic. By adding the numbers below to the frequency of the crystals, the new frequency can be derived. The added numbers used are the same for all units.

EXAMPLE:		Hy-Gain 670					
				Add this		New Frequency	
X1	23.290	+	.270	=		23.560 MHz	
X2	23.340	+	.250	=		23.590 MHz	
X3	23.390	+	.250	=		23.640 MHz	
X4	23.440	+	.250	=		23.690 MHz	
X5	23.490						
X6	23.540						


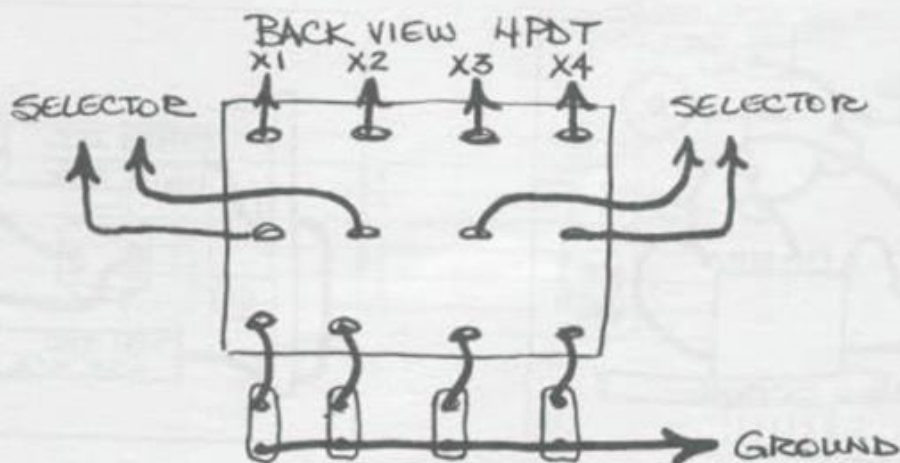


TRAM D-201
TRANSMIT ON THE VARIABLE DIAL AND 15 WATT POWER INCREASE


- (1) Remove the bottom cover from the unit and locate the two 10 watt power resistors located near the rear of the unit.
- (2) Mount a mini SPST switch in one of the holes between the power resistors as shown.
- (3) Solder two pieces of hookup wire across the switch and connect the two ends to each of the power resistors as shown.
- (4) Raise the top cover of the unit and locate the orange wire coming through a hole in the chassis to the crystal-variable switch.
- (5) Solder a 4 in. piece of wire to the connection point with the orange wire as shown.
- (6) Solder the other end of the wire to the ground lug just behind the switch as also shown.
- (7) Locate the two red and white wires on the right side of the switch. Cut and remove the one running around the switch through the hole in the chassis.

NOTE: The channel selector must be on channel 9 when using the variable dial. The power switch is capable of 20 watts output with re-adjustment of the plate and load controls on the rear of the unit. When using SSB, the clarifier control on the unit moves only the transmit when using the variable dial.

The modulation can be increased by adjustment of the limiter control on the bottom of the unit. This is shown in the manual and will greatly improve performance.

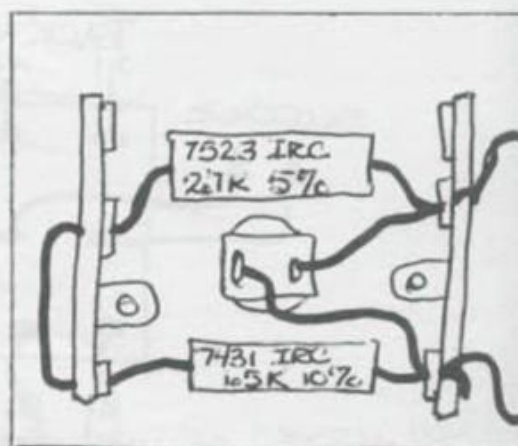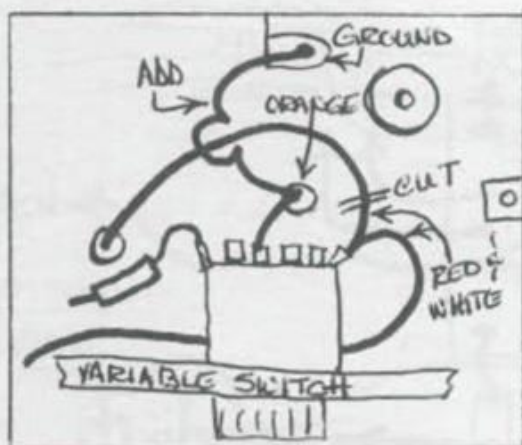

TEABERRY STALKER ONE 37 CHANNEL CAPABILITY

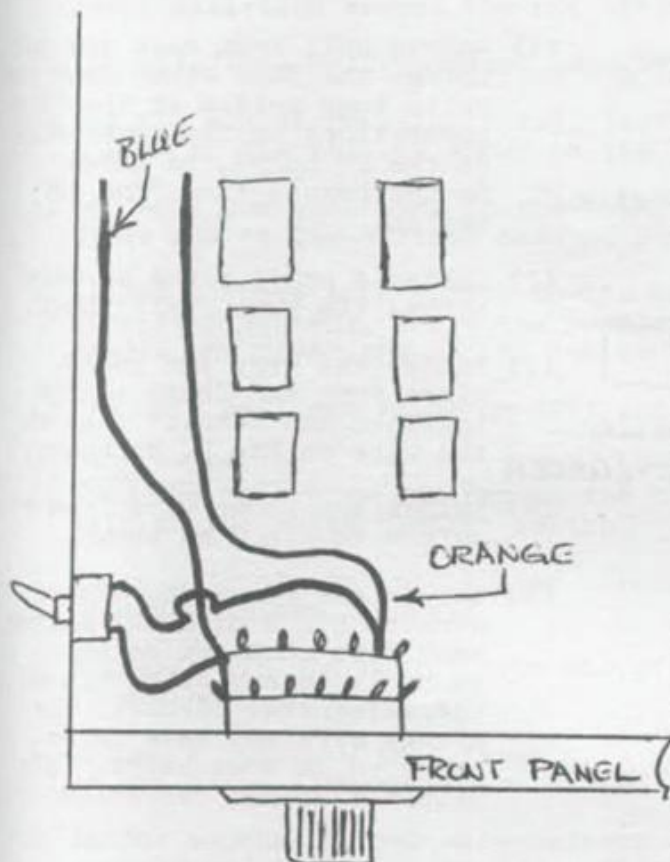


- (1) Remove the unit from its cabinet and locate the PLL selector box to the left side behind the channel selector.
- (2) Remove the cover from the box by pulling off the tape and prying its edges.
- (3) Mount a mini SPST switch in one of the two holes in the left side of the unit.
- (4) Solder two wires across the switch and solder one to the blue wire and the other to the orange wire on the channel selector, as shown.
- (5) Replace the cover to the box and retape it in place.
- (6) Cut out a small slot in the cover of the unit to allow the cover to slide over the switch.


NOTE: Using the switch, the unit can now operate from channel 10 to 23 on 14 new channels. See frequency chart below. This modification may not work on all models especially older sets because of new changes in PLL units.

CHANNEL	FREQUENCY	CHANNEL	FREQUENCY
10	27.275	17	27.365
11	27.285	18	27.375
12	27.305	19	27.385
13	27.315	20	27.405
14	27.325	21	27.415
15	27.335	22	27.425
16	27.355	23	27.455

TEABERRY ELECTRONICS RACER "T" 52 CHANNEL CONVERSION

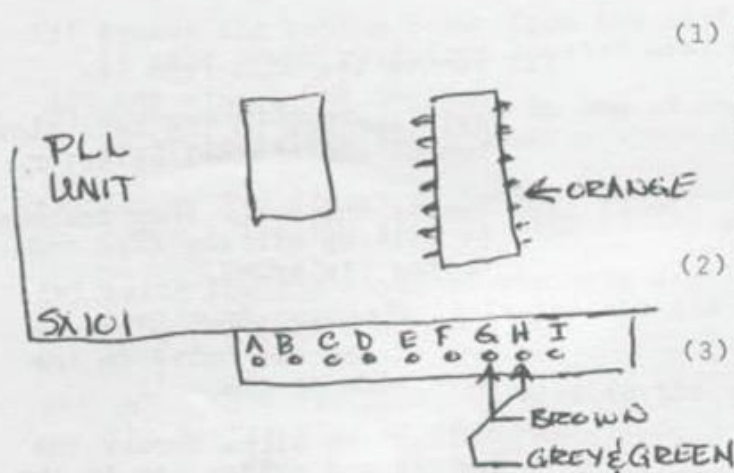

- (1) Remove unit from case and unsolder the four wires from the Delta tune switch to the four connections on the front edge of the PC board, as shown. Do not remove them from the switch.
- (2) Solder a small piece of wire across the two points shown.
- (3) Solder the gray and green wires from the Delta switch together and connect them to the wire on Pin H, as shown.
- (4) Solder the brown wire from the switch to Pin G as shown.
- (5) Solder the remaining orange wire to Pin 3 of IC802 making very sure that you do not short it to any other pin on the integrated circuit. The orange wire may have to be extended on some units. This will not affect operation.

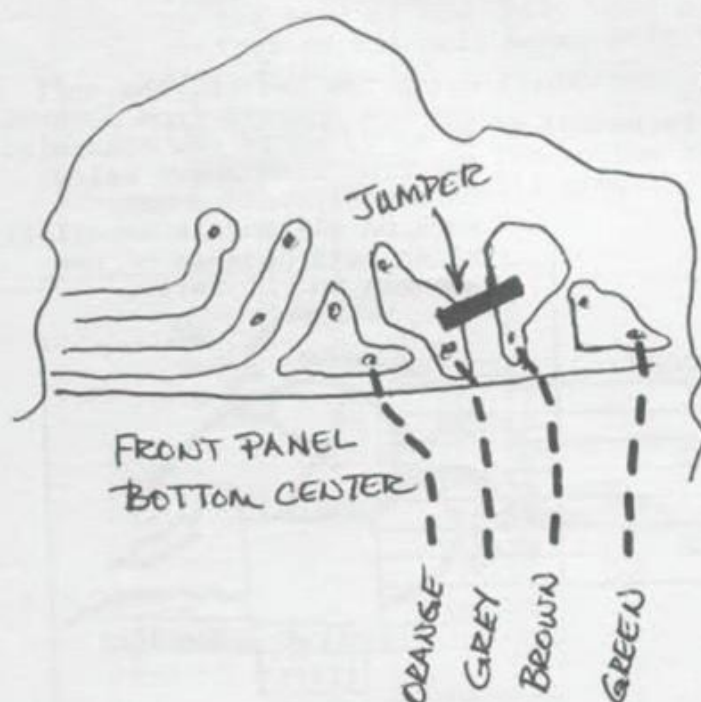

NOTE: To use the channels properly, see the chart on the next page. Unit may not receive above channel 11 on some units because of extreme frequency coverage.




PRESIDENT WASHINGTON/GRANT SLIDER & CHANNEL EXPANSION

SLIDER

1. Remove the unit from its cabinet and locate the metal partition around the PLL circuit.
2. Cut out diode D-30, located just behind the partition.
3. Cut the end of resistor R-119, leaving room to solder a wire to the end, as shown in the figure.
4. Solder a two inch wire to the end of R-119 and the other end to the striped side of D-44.
5. Solder a three inch jumper to the end terminal of the clarifier control, where the purple wire is attached. Solder the other end of the jumper to the metal partition.
6. The unit will now slide up 2KHz and down 4KHz.

CHANNEL EXPANSION

1. Turn the unit over and remove the plug just to the left of the noise blanker switch.
2. Cut pin 19 of the integrated circuit away from the ground as shown in the figure.
3. Solder a 470 ohm resistor to the pin and the other end to ground.
4. Solder a jumper wire between this same pin and pin 2 on the noise blanker switch.
5. Solder another jumper wire between pin 21 of the integrated circuit and pin 1 of the noise blanker switch.
6. The unit will now transceive on 27.455 MHz, beginning on channel 8, and continuing upward to 27.805 MHz.

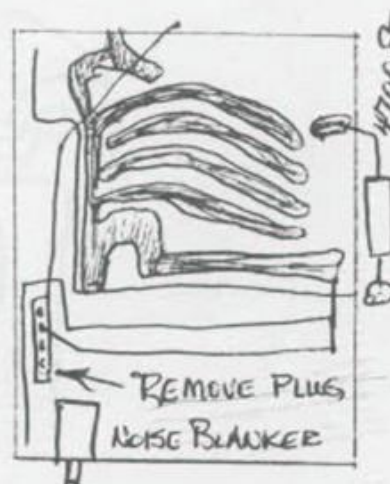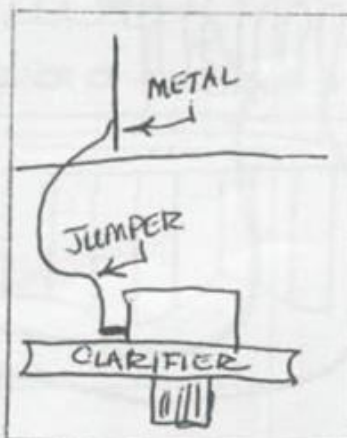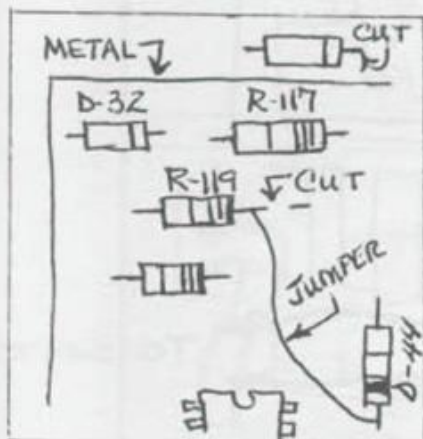


PRESIDENT - JOHN Q./HONEST ABE/ZACHARY T./
TEDDY R.
70 PLUS CHANNEL CONVERSION

1. Remove the unit from its cabinet and locate the clear ribbon cable from the channel selector. This cable connects to the circuit board as shown in the figure.
2. Mount a SPST switch on the unit in a convenient spot and solder two wires to the switch and the other ends to the two parts as shown in the figure.
3. To use the new channels, flip the switch on and the channel selector to channel 4. This will be channel 40 and continue upwards to the 70's .

MODULATION INCREASE

Turn VR-5 to its fully counter-clockwise position, on all units except the JOHN Q., in which case it is labeled as RT-4

*NOTE: When soldering the PLL unit as shown in the figure, make sure that all wiring is correct and not shorting to any other pins BEFORE APPLYING POWER, as very serious damage can result to the PLL unit.

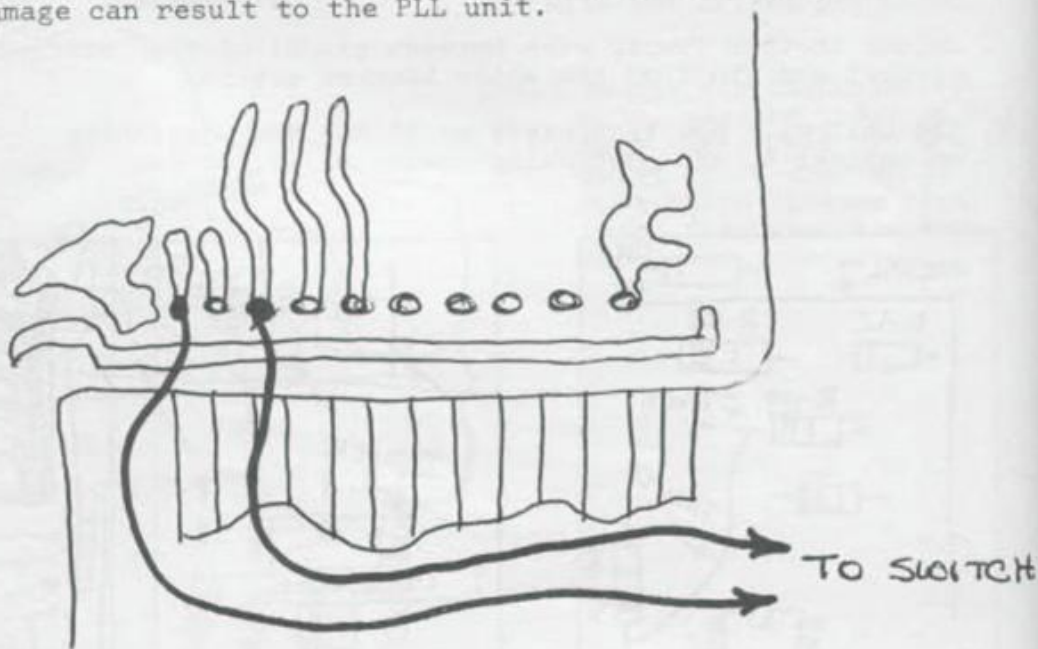

COURIER CENTURION/SPARTAN/GLADIATOR PLL

SLIDER


1. Remove the unit from its cabinet and locate D-39, just behind the PLL circuit and cut it out.
2. Follow the gray wire to its other end and cut it loose from the board as shown in the figure.
3. Solder the cut end of the gray wire to the end terminal on the PLL unit, which also has a green wire attached to it.
4. Solder a small jumper wire between the black wire and the orange wire located on the right side.
5. The clarifier will now slide up 2 KHz and down 5 KHz.

MODULATION

1. Locate C-96 in the far left corner of the circuit board and cut it out, thus removing the limiter and allowing full modulation on both AM and SSB.


27.145 MHz

1. Remove the two wires from the tone switch and tape them out of the way.
2. Solder two wires approximately 4" long to the switch and connect the other ends to the first two terminals on the PLL circuit board as shown.
3. With the switch pulled out, channel 15 becomes 27.145 MHz and channel 16 becomes 27.165 MHz.

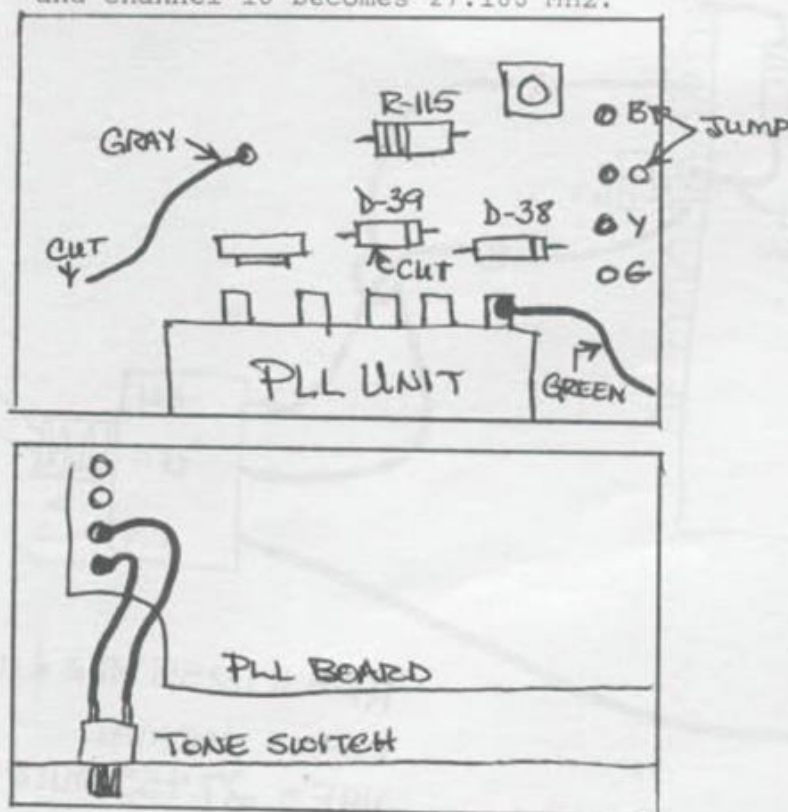


COURIER SPARTAN/GLADIATOR/CENTURION PLL CHANNEL EXPANSION


1. Remove the top cover of the unit and the PLL circuit cover plate.
2. Carefully count 6 pins towards the front of the unit and cut the pin as shown in the figure.
3. Obtain a 4700 ohm resistor and a 1N60 diode and solder them to the IC side of the cut pin as shown.
4. Mount a SPST switch in a convenient place and wire it up so as to correspond to the diagram.
5. To use the switch on the 23 channel models, the channel selector must be on channels 8 through 22. On the 40 channel units, it is functional on channel 8 and up.
6. NOTE: if the unit is a 40 channel, do not use wire B on the switch as it is not needed. If the unit is a 23 channel, the switch must have a center off position.

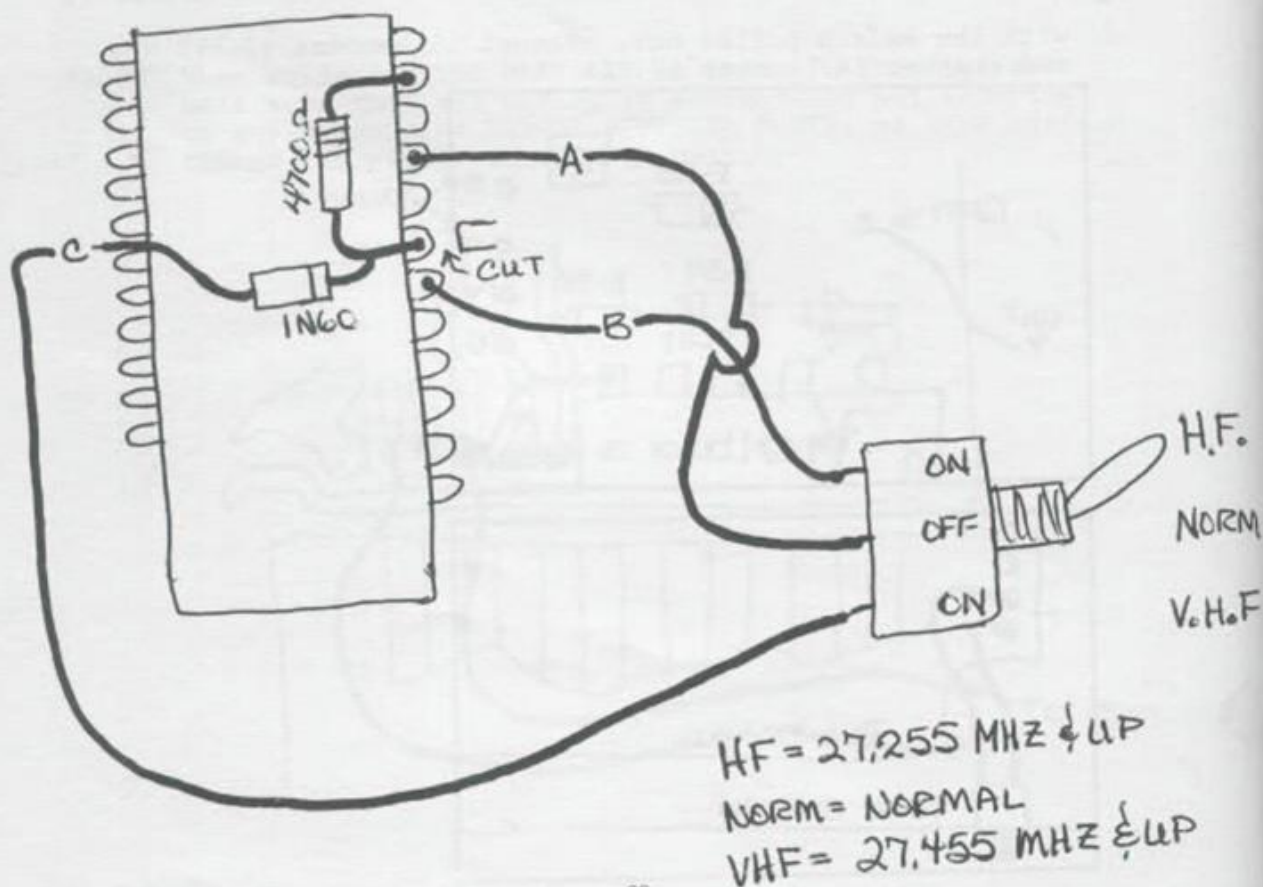


GENERAL INFORMATION

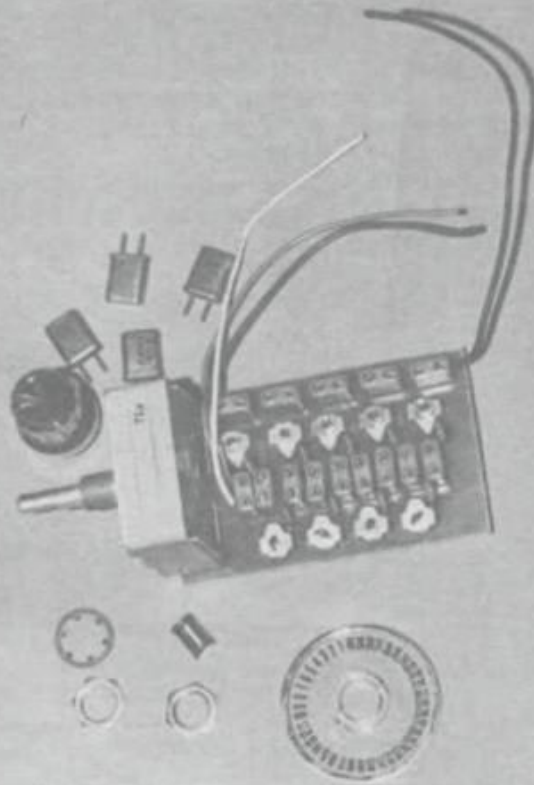


ILLEGAL ON CLASS D
SWITCH KIT FOR VARIOUS MODEL
OF MIDLANDS & COBRAS,
ESPECIALLY SIDEBAND MODELS.
AVAILABLE AT: \$54.95

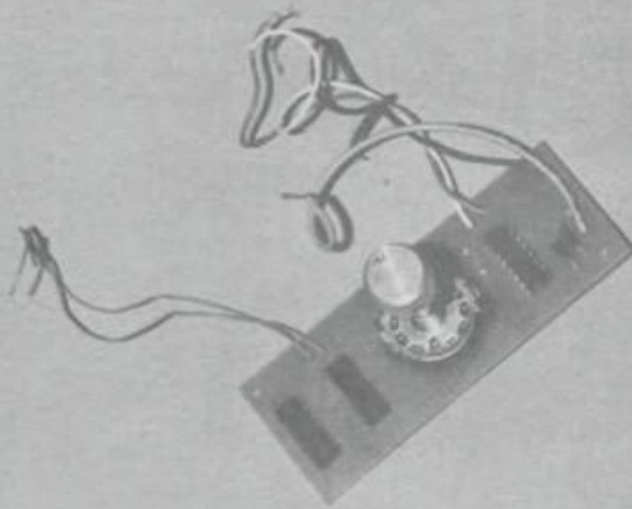

SWITCH KIT FOR TEABERRY
STALKER TWO. ILLEGAL ON
CLASS D CITIZENS BAND.

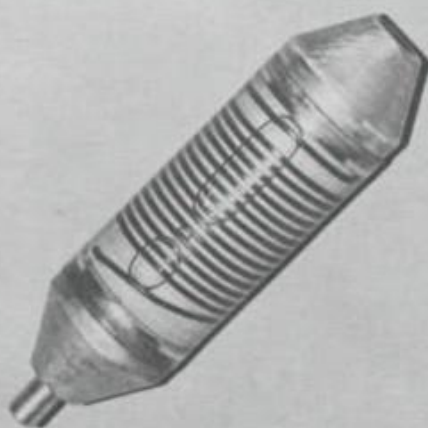

OIL-FILLED LOAD FROM AN AUDIO
KING ANTENNA, AKO-100, \$39.95

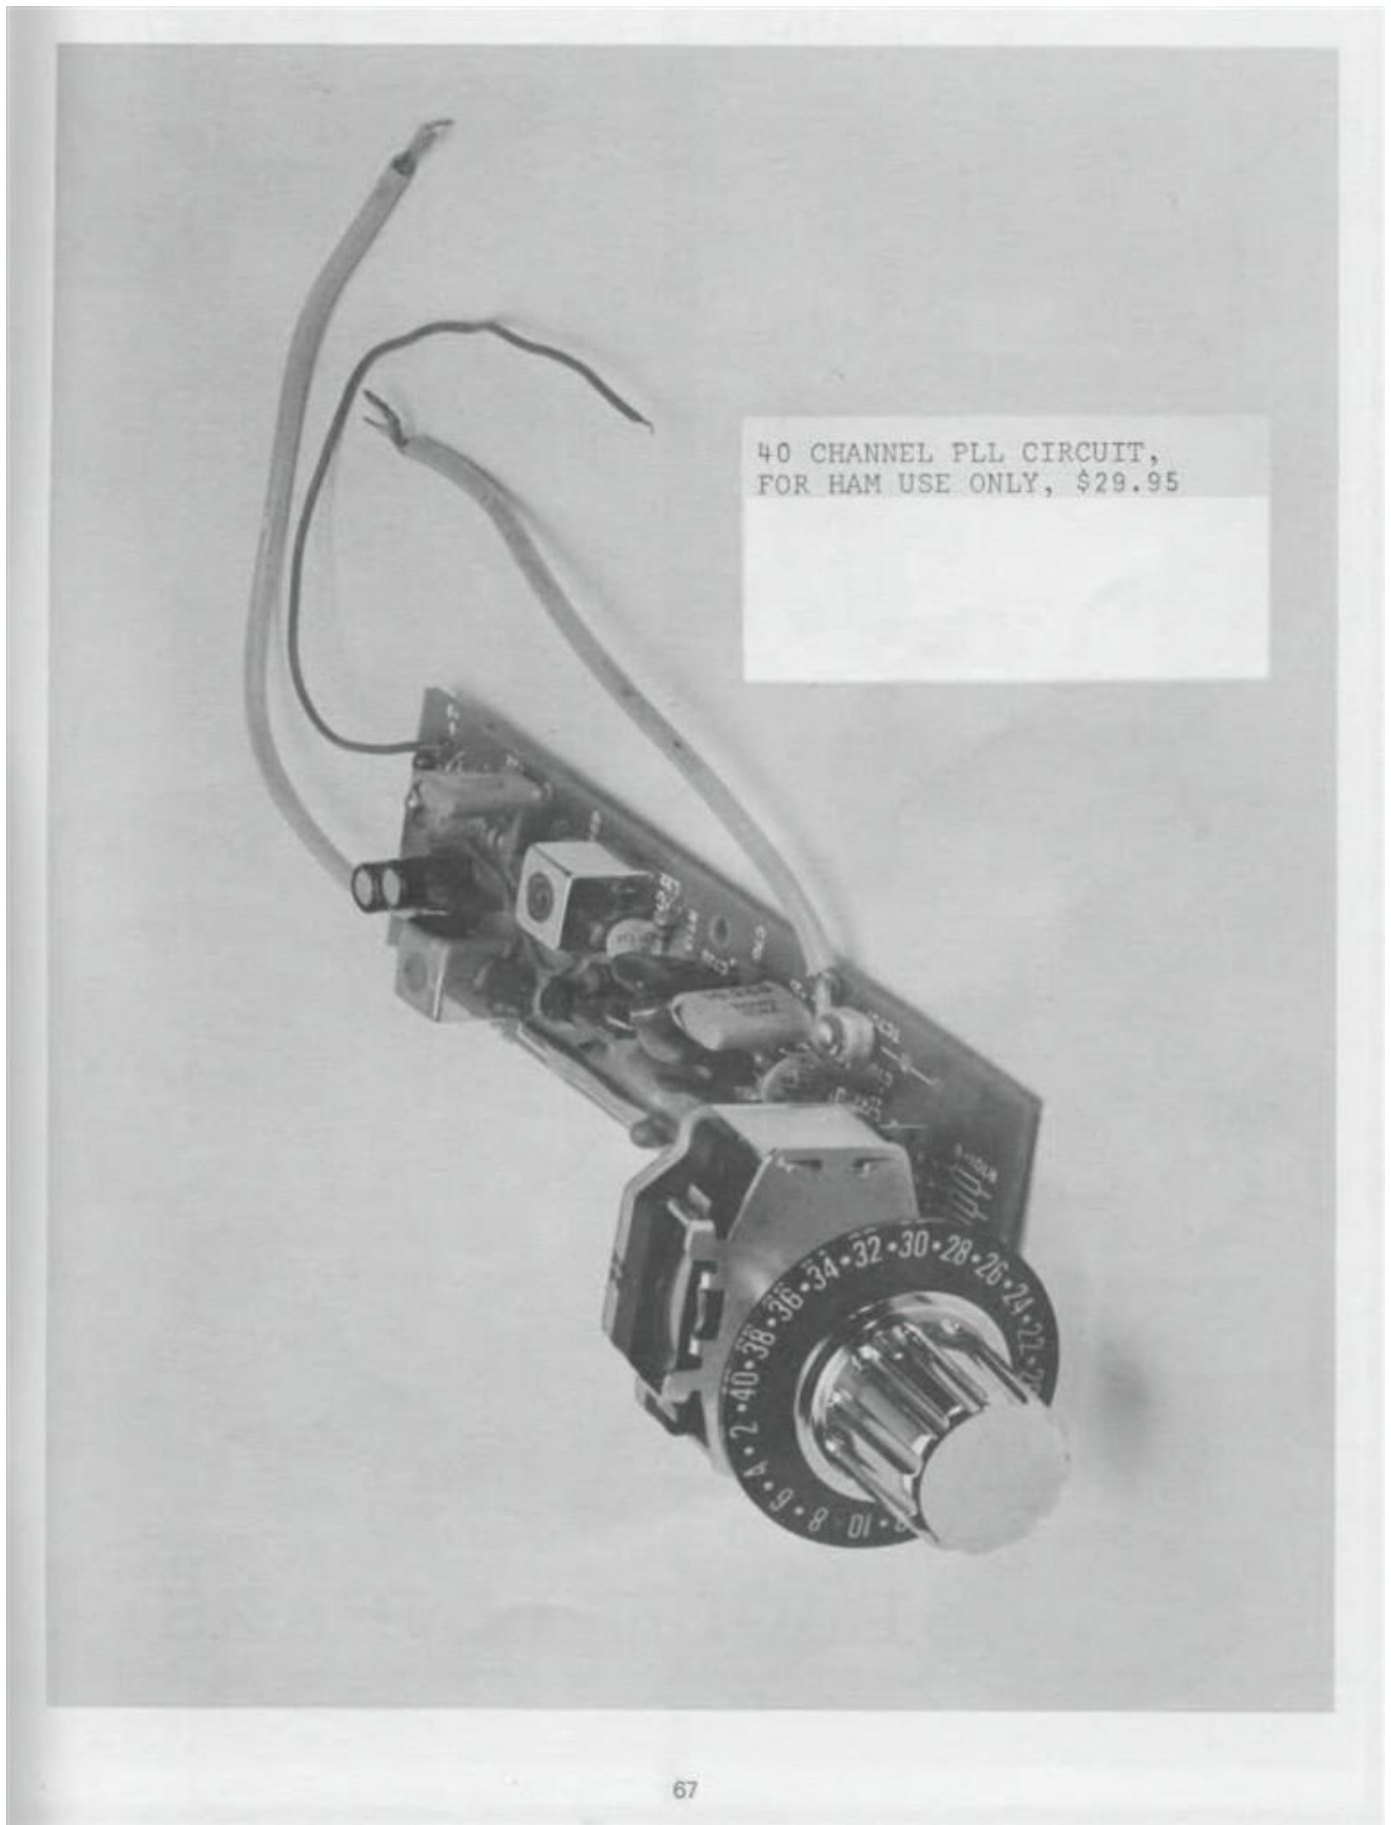




list: \$379.95



list: \$539.95

Kenrick **EAGLE LINEARS**

EAGLE 500

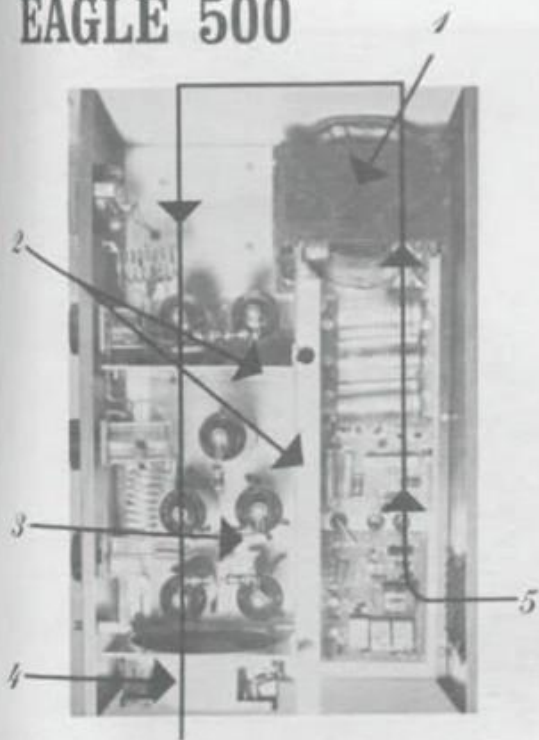

(1) Heavy-duty Plate Transformer (2) RF Shield
(3) Parasitic Choke (4) Exhaust Fan (5) Air Flow

Operating Modes: AM, SSB, CW

Special shielded input matching transformer

Shielded RF cavity for clean output

Raised front for easy switching

Superior wind tunnel cooling system

Pre-amp gain nominal 18 db., which is operational in both standby and operate modes

RF activated relay switching

Seven tube (20LF6) compliment

Bridge power supply for heavier current

Frequency range: 15 Meters

Power requirements: 117 VAC at 10 Amps

500+Watts (CW) carrier power


Drive nominal 2 to 8 Watts

90-Day Limited Warranty

P.C. board construction for dependability and serviceability

Meter: Relative watts meter for ease in tuning

EAGLE 200

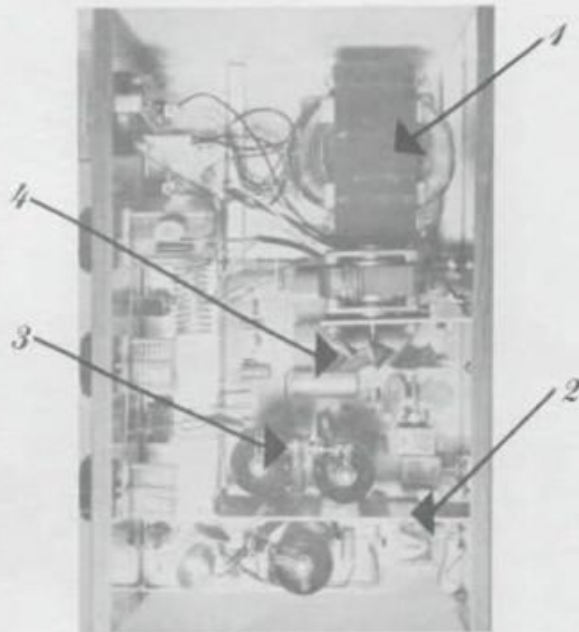

(1) Heavy-duty Plate Transformer (2) RF Shield
(3) Parasitic Choke (4) Exhaust Fan

Operating Modes: AM, SSB, CW

Special shielded input matching transformer

Shield between Driver and Output stages

Raised front for easy switching

Fan-cooled for longer life

Pre-amp gain nominal 18 db., which is operational in both standby and operate modes

RF activated relay switching

Three tube (20LF6) compliment

Bridge power supply for heavier current

Frequency range: 15 Meters

Power requirements: 117 VAC at 5 Amps


200+Watts (CW) carrier power

Drive nominal 2 to 8 Watts


90-Day Limited Warranty

P.C. board construction for dependability and serviceability

Meter: Relative watts meter for ease in tuning

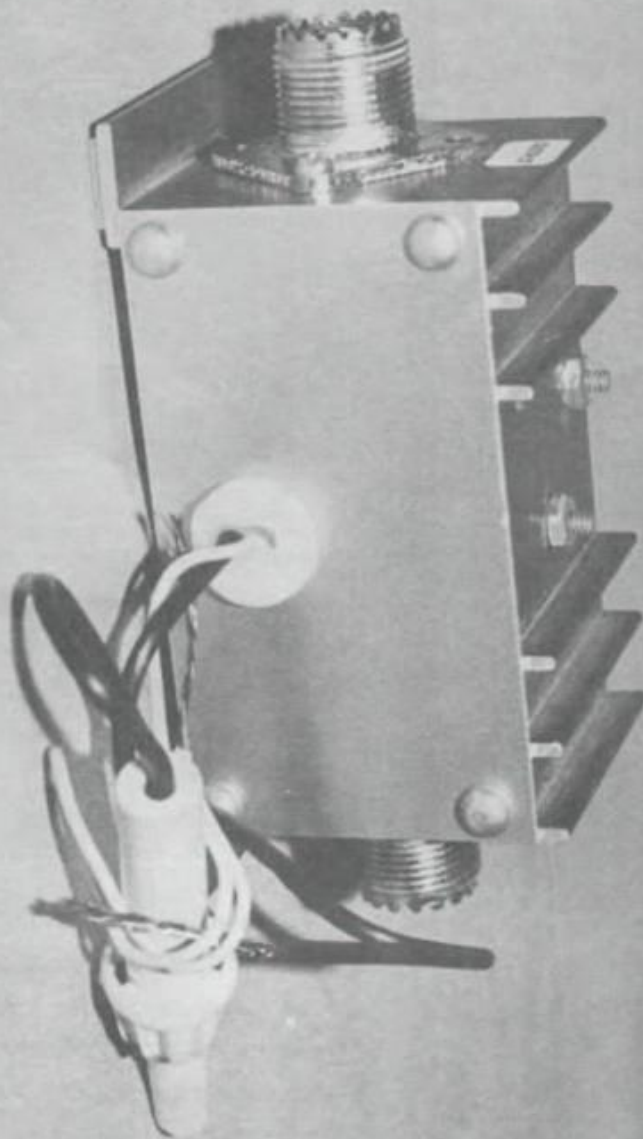

25 WATT LINEAR, COMPACT SIZE.
ACTUAL SIZE: 2 7/8" x 1 3/4"
x 1 5/8". COST- \$59.95

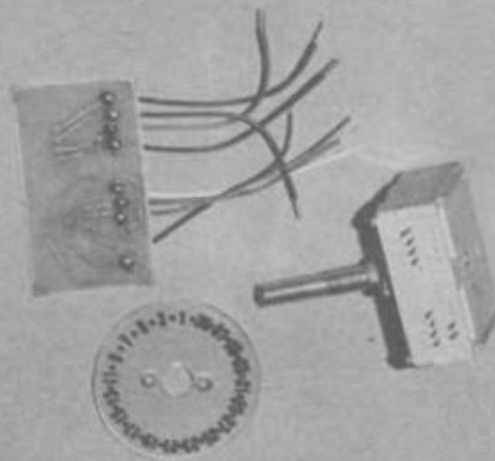

40 CH PLL ADAPTER SWITCH
(NOT FOR TRANSMIT USE)
AVAILABLE AT MOST CB, HAM
RETAIL OUTLETS
(FITS HYGAIN ETC.)

